

VT No. 16-0001 Instructions

1. Remove rocker shaft nut.
2. Screw tool onto shaft.
3. Tighten threaded shaft down.
4. Turn tool to adjust amount of oil flow.

