

# FAIRING MOUNT MIRROR

## Installation Requirements

### WARNING

The rider's safety depends upon the correct installation of this kit. Use the appropriate service manual procedures.)

## INSTALLATION

### Installing Mirrors

### WARNING

To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding.

1. See the service manual. Remove the main fuse.

#### NOTE

*Do not leave windshield in place with outer fairing removed. Windshield could fall and be damaged.*

2. See the service manual. Remove the outer fairing and windshield.

3. Drill mirror mounting holes.
  - a. Locate drill points .
  - b. Cover the finished surface opposite of the drill points with masking tape to prevent damage to painted surfaces.
  - c. Drill a 1/8 inch pilot hole in the center of each drill point .
  - d. Drill a 13/32 hole at drill point with a twist drill bit.
  - e. Drill a 7/32 hole at drill point with a twist drill bit.
  - f. Remove tape.
  - g. Repeat for opposite side.

#### NOTE

*Mirror assemblies and backing plates are marked with an R or L to indicate the left and right side assemblies.*

*The flange nut is a self locking nut and must not be tightened more than 30 **in-lbs** (3.4 Nm).*

4. . Install mirror assembly
  - a. With the locating pin of the mirror assembly inserting into the lower hole, install the mirror assembly.
  - b. Install backing plate over mirror assembly, so that the locating pin is secured in the small hole of the backing plate.
  - c. Install flange nut . Tighten to 20-30 **in-lbs** (2.3-3.4 Nm).
  - d. Repeat for opposite side.
5. See the service manual. Install the outer fairing and windshield.

#### NOTE

*Remove safety decal from mirror before operating vehicle.*

6. See the service manual. Install the main fuse.