

V-Twin Mfg.
Generator Caution
For the Following parts
VT Part No., 32-0207, 32-0214, 32-0787, 32-0790 & 32-0967

CAUTION: After generator wires are connected, it is necessary to polarize (“flash”) the field coils in the generator to establish the correct generator polarity. This is done by quickly applying battery voltage to the generator armature terminal. This instant flow of current from the battery to the generator will set the polarity for correct operation.

Polarizing the Generator:

1. If using a battery take a jumper lead and momentarily touch positive battery terminal to (A) post on generator.
2. If using without a battery, use the following procedure:
 - A. Use any battery with correct voltage and ground the negative (-) side of battery to frame.
 - B. Connect positive (+) side of battery to (A) post on generator momentarily. Generator is now polarized.
 - C. Remove battery

Generator Gear Kit:

1. Use Generator Gear Kit 32-0204 for BT models.
2. Use Generator Gear Kit 32-0983 for XL models.