



2006-up Dyna/2007-up for FXST-FLT



Jims Right Side Drive Transmission Trap Door Puller Tool. Removes access door on all right side drive transmissions.
VT No. 16-1356



Jims Main Drive Gear Installer Tool. This tool will hold the main drive gear square to its bearing bore for proper main drive

gear installation. Use on 2006-up Dyna and 2007-up FXST-FLT models.


VT No. 16-1350



Jims Primary Locking Tool use this tool to lock clutch hub sprocket to the front engine sprocket. Allows removal or torquing of clutch hub and engine nuts. Use on all 2006-up Dyna and 2007-up models.
VT No. 16-1357



Jims Inner Cam Bearing Remover Tool allows removal of needle bearing and will also keep needles from falling into engine. Use on 2006-up Dyna and 2007-up FXST-FLT models.
VT No 16-1351

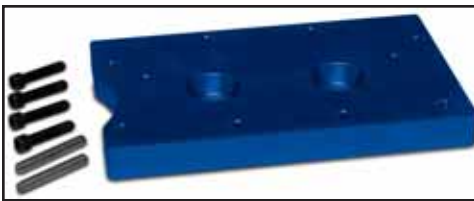

Jims Transmission Door Removal Tool use this tool to pull complete door with gears and shafts from

transmission. Use on 2006-up Dyna and 2007-up FXST-FLT models.

VT No. 16-1358



Jims Cam Locking Tool allows removal and torquing of cam sprocket bolts by locking camshaft and crankshaft sprockets. Use on 2006-up Dyna and 2007-up FXST-FLT models.
VT No. 16-1352



Jims Transmission Main Drive Gear Nut Wrench Tool. Use to remove the 2 1/4" hex nut from main drive gear which secures the rear drive trans pulley. Use with 1/2" drive ratchet. Use on all 2006-up Dyna and 2007-up FXST-FLT models.

VT No. 16-1359



Jims Main Drive Gear Bearing and Seal Installer. This tool will hold bearings and seal square to its bore for proper installation and will also allow both to be installed to proper depth. Use on all 2006-up Dyna and 2007-up FXST-FLT models.
VT No. 16-1353



Jims Inner Cam Bearing Installer Tool. Use this tool to press in the two inner cam bearings without damage to bearings. Installs bearing to proper depth in case. Use on 2006-up Dyna and 2007-up FXST-FLT models.

VT No. 16-1360



Jims Case Splitter. Use this tool to break the case sealant by pushing apart both case halves. Use on 2006-up Dyna and 2007-up FXST-FLT models.
VT No. 16-1354



Starter Jackshaft Seal Installer Tool will easily allow alignment and installation of starter jackshaft seal (OEM#12066) without distortion or damage to seal. For 1994-06 Big Twins except 2006 Dyna.

VT No. 16-1373



Jims Main Bearing Installer Tool. Allows proper installation of transmission case main bearing by holding bearing square to its bore. Use on 2006-up Dyna and 2007-up FXST-FLT models.

VT No. 16-1355



Jims TC-88 Crankshaft Guide use to spread pinion bearing rollers while reassembling right side engine case on to flywheel assembly.

VT No. 16-1281

