

INSTRUCTION SHEET FOR #2312

PRIMARY LOCKING BAR

2312 - USE ON 2007 TO PRESENT FL'S

Refer to H.D.® Service Manual for specifications.

WARNING: Disconnect negative battery cable.

- 1. Refer to service manual for removal of primary cover.
- 2. If you are removing the motor sprocket nut, install the locking bar by laying it flat in between the clutch sprocket and the motor sprocket.
- 3. With bar in between the two teeth on the front motor sprocket, in the 4-O'clock position, and the other end of bar in between the two teeth of the clutch hub at about the 10-O'clock position.
- 4. You are ready to remove the motor sprocket nut using hand tools only! WARNING: Do not use air or electrical impact.
- 5. To install front motor sprocket nut to the right torque, install the locking bar opposite of the instructions in #2 with one end of bar at clutch hub in the 8-O'clock position and the other end at the 2-O'clock position.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS! SEE JIMS® CATALOG FOR HUNDREDS OF TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.

555 DAWSON DRIVE, CAMARILLO, CA 93012 PHONE 805-482-6913 • FAX 805-482-7422

No.2312-IS



REV N/C 11/06

INSTRUCTION SHEET FOR #2312

PRIMARY LOCKING BAR

2312 - USE ON 2007 TO PRESENT FL'S

Refer to H.D.® Service Manual for specifications.

WARNING: Disconnect negative battery cable.

- 1. Refer to service manual for removal of primary cover.
- 2. If you are removing the motor sprocket nut, install the locking bar by laying it flat in between the clutch sprocket and the motor sprocket.
- 3. With bar in between the two teeth on the front motor sprocket, in the 4-O'clock position, and the other end of bar in between the two teeth of the clutch hub at about the 10-O'clock position.
- 4. You are ready to remove the motor sprocket nut using hand tools only! WARNING: Do not use air or electrical impact.
- 5. To install front motor sprocket nut to the right torque, install the locking bar opposite of the instructions in #2 with one end of bar at clutch hub in the 8-O'clock position and the other end at the 2-O'clock position.



CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS! SEE JIMS® CATALOG FOR HUNDREDS OF TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.