

**VT No. 16-0595**

Deltran Battery Tender LCD Battery Meter

The LCD displays battery voltage when the button is pressed or when initially plugged in.

For use iwth Deltran Battery Tender Harness

The red LED flashes when voltage is low.

3-16 Voltage Range

**GREEN:** Battery Charged (Greater than 12.0 V)

**YELLOW:** Battery is Low (11.6 to 012.0V)

**RED:** Battery is Discharged (Less than 11.6V)