

## INSTRUCTION SHEET FOR TOOL #2256

## MAIN DRIVE GEAR SEAL INSTALLER USE ON ALL 5-SPEED BIG TWIN MODELS 1980-2006 EXCEPT 06 DYNA. ALSO WORKS ON AFTERMARKET 6 SPEED



Use to install the main drive gear oil seal to the proper depth with transmission assembled.

Refer to H-D® Service Manual for specifications.

- 1. Slide on the seal protector sleeve over the end of the main shaft. Use transmission oil to lube sleeve and I.D. of seal.
- 2. Install seal with spring facing transmission case.
- 3. Install seal driver and hand press seal into main drive gear. Light taps with a rubber mallet may be used if desired. The driver will position seal at proper depth.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOLS! SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.

"From the Track... To the Street!"

555 DAWSON DRIVE, CAMARILLO, CA 93012 • PHONE 805-482-6913 • FAX 805-482-9224

No.2256-IS



REV A 1-14

## INSTRUCTION SHEET FOR TOOL #2256

MAIN DRIVE GEAR SEAL INSTALLER
USE ON ALL 5-SPEED BIG TWIN MODELS 1980-2006 EXCEPT 06 DYNA.
ALSO WORKS ON AFTERMARKET 6 SPEED



Use to install the main drive gear oil seal to the proper depth with transmission assembled.

Refer to H-D® Service Manual for specifications.

- 1. Slide on the seal protector sleeve over the end of the main shaft. Use transmission oil to lube sleeve and I.D. of seal.
- 2. Install seal with spring facing transmission case.
- Install seal driver and hand press seal into main drive gear. Light taps with a rubber mallet may be used if desired. The driver will position seal at proper depth.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOLS! SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.