



INNER CAM BEARING REMOVER USE ON BIG TWIN 1958-98

“Warning disconnect negative cable of battery to avoid accidental start ups”

1. Refer to Service Manual for removal of cam cover and tappet blocks.
2. Rotate flywheels until the timing mark on the pinion gear (the one for cam gear) is pointing straight down. This will give the most room behind cam bearing.
3. Disassemble tool by removing nut, brass washer, sleeve, and inner pin. This will leave just the remover portion of the tool #5 (the piece with the four grooves), we call it the puller.
4. Push the puller through cam bearing (grooved end first). You can tap end of puller with a soft hammer until the puller is completely through bearing.
5. Now install body #4 with puller bore towards bearing, next apply a little oil to washer #3 and nut #2.
6. Snug up nut, apply a little oil to the pin #1 and slip pin through center until flush with puller.
7. With your 1-1/8” wrench turn nut clock wise until bearing is pulled free of case

Use tool 16-0126 to install bearing.