

- 1. Front brake shoe adjusting cam nut
- 2. Rear brake shoe adjusting cam nut

Figure 2G-4. Adjusting Rear Brake

Instructions for VT No. 23-0501, 23-0502, 23-3022, 23-3027, 23-0714, 23-0715, 23-9241, 23-9240, 23-9247, 23-0087

## ADJUSTING REAR WHEEL BRAKE SHOES (Fig. 2G-4)

Raise rear wheel so it can be turned freely by hand. Brakes are adjusted by means of two adjusting cams located on outside of brake side cover. Turn front adjusting cam nut (1) counterclockwise until wheel has noticeable drag. Spin wheel forward and backward to center shoes. Slowly turn cam nut clockwise until wheel turns freely. Repeat process on rear cam nut (2) which spreads shoes with a clockwise rotation and retracts shoes with a counterclockwise rotation.