

RIGHT

PUSH BUTTON
(PUSH OFF)



Red/Yellow(PUSH BUTTON)


TURN-R



Orange/White(POWER)

White/Brown(TURN-R)

START

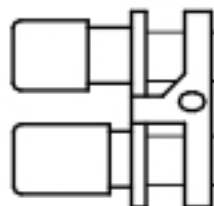

Black/Red(START)


White/Black(POWER)

OFF/RUN

Gray(OFF/RUN)

LEFT

TURN-L

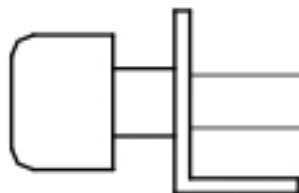

White/Violet(TURN-L)

HORN



Orange/White(POWER)

Yellow/Black(HORN)

White(HI)

Blue(POWER)

HI/LO

Yellow(LO)