

PUSH BUTTON
(PUSH OFF)

RIGHT

TURN-R

START

OFF-RUN

Red/Yellow (PUSH BUTTON)

Orange/White (POWER)

White/Brown (TURN-R)

Black (LED GROUND -)

Black/Red (START)

White/Black (POWER)

Gray (OFF-RUN)

LEFT

TURN-L

HORN

HI-LO

White/Violet (TURN-L)

Orange/White (POWER)

Black (LED GROUND -)

Yellow/Black (HORN)

White (HI)

Blue (POWER)

Yellow (LO)

"Note: The Black LED Ground wires needs to be attached to the ground somewhere on the motorcycle to work properly."