

## **VT No. 32-1282 Instructions**

**Regulator wiring:** Short wires go to generator terminals.

Long wire goes to positive side of battery.

**Note:** Regulator is grounded through housing