

MANIFOLD INSTALLATION



Ensure both jugs and heads are loose.



Mount manifold to heads.



Make sure there is equal space on both sides of manifold in area noted above.

MANIFOLD INSTALLATION



Tighten manifold nuts.



Tighten cylinders to case.



Tighten heads.