

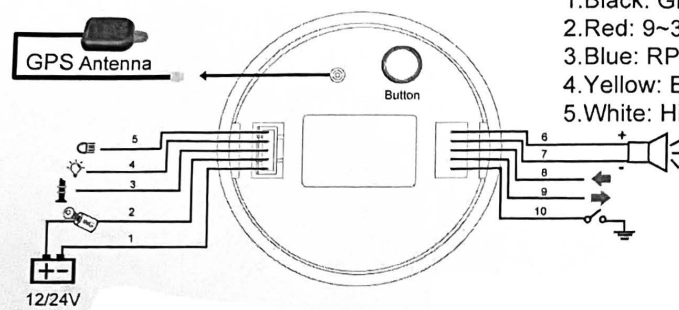


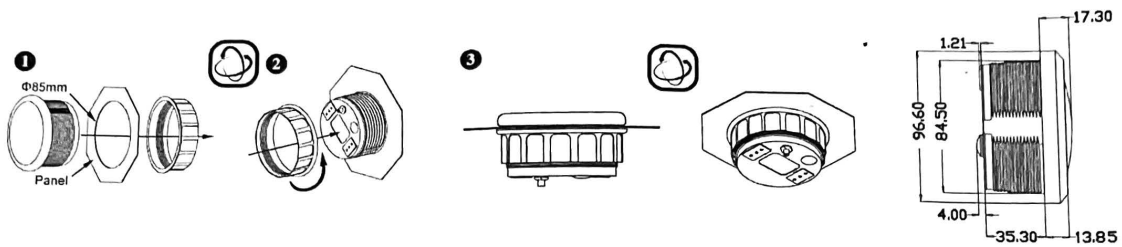

- 1.Black: Ground(-)
- 2.Red: 9~32VDC(+)
- 3.Blue: RPM Signal
- 4.Yellow: Backlight
- 5.White: High Beam
- ☆6.Brown: Buzzer Alarm(+)
- ☆7.Green: Buzzer Alarm(-)
- 8.Yellow: Left Turn
- 9.Gray: Right Turn
- ☆10.White: External Button
- ☆Not Necessary to Connect

Gas Engine		
Cylinder	Cycle	Speed Ratio
2	4	2
6	4	3
8	4	2 or 4
10	4	5
12	4	6

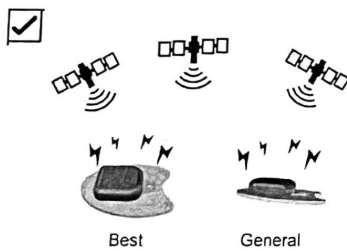

- Turn it on, the gauge will start to search signal and LCD displays "gps---".



- Can't receive GPS signal

- If there is still no GPS signal after three minute, LCD displays "Err".