


# VT No. 39-0014 Speedometer and Tachometer

## 1-Mounting

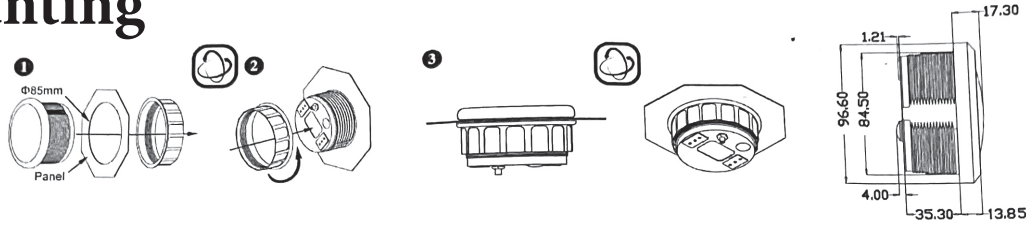


### Installation Instructions

#### 1. Mounting


- Before installation, make sure there's enough space/depth for gauge.
- Mount the gauge in the hole and screw down.
- Diameter: 85mm (3-3/8")
- Depth: 55mm (2-1/6")

## 2- Gauge Wiring

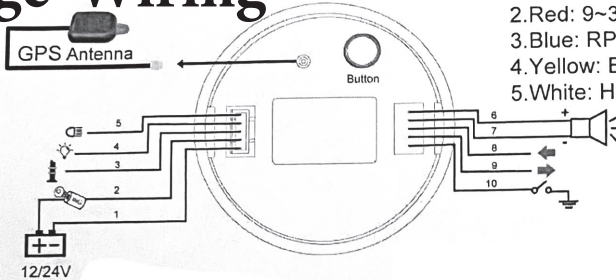


Gas Engine		
Cylinder	Cycle	Speed Ratio
2	4	2
6	4	3
8	4	2 or 4
10	4	5
12	4	6

## 3- GPS Installation

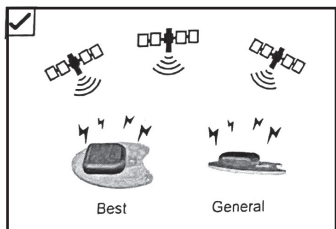

- Turn it on, the gauge will start to search signal and LCD displays "gps---".

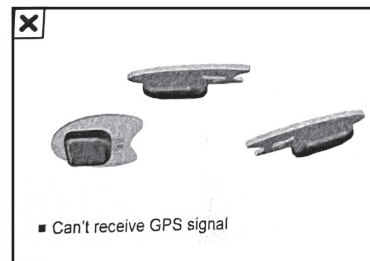

- Can't receive GPS signal
- If there is still no GPS signal after three minute, LCD displays "Err".

### Setting of Tachometer

The minimum step value is .0.1, the adjustment range: 1.0-360.0

1. When power is on, press the button of the backside, it will enter into setting mode (Pulse).
2. After enter into setting mode, keep on pressing the button for 3 seconds, the value will show "--"
3. Release the button and press, the value will automatically decrease. The longer you are pressing the button, the quicker the value will count.
4. Release the button and press again, the value will automatically increase. The longer you are pressing the button the quicker the value will count.
5. After getting the required value, release the button. The tachometer will save your setup after 3 seconds. If the set up doesn't meet you demand, please re-setup.

### Setting of Speed Alarm

1. When power is on, press the button of the backside twice, it will enter into setting mode( Speed Alarm).
2. After enter into setting mode, keep on pressing the button for 3 seconds, the value will show "--."
3. Release the button and press again, the value will automatically increase.
4. After get the required value, release the button. The system will save your setup after 3 seconds. If the set up doesn't meet your demand, please re-setup.