

BEARING INSTALLATION VT No. 44-0983

1. Center ring must be pressed out.



- 2.



BEARING INSTALLATION VT No. 44-0983

3. Bearing (44-0983) falls into hub (45-0981).



BEARING INSTALLATION VT No. 44-0983

4. Lock ring (not included) tightens down locking into place.

