



Bushing-Race Pullers



Fork Seal Driver for 41 mm bushing and seal installation.
VT No. 16-0557



Bushing Puller Tool will extract bushings in blind holes of cam covers.
VT No. 16-0231



Fork Bushing & Seal Installer. Installs bushing and seal without damaging components.

VT No.	OEM	Use
16-0055	34190	1983-up FXRT 1983-up XR 1984-up FX-XL
16-0056	34634	1984-Later FLT-FXWG
16-0964	36583	1987-up FXR-FXRS, 88-up XL



Adjustable Split Fork Seal Driver Set use on all 35mm, 39mm and 41mm forks. Includes seal drive and three seal guides.
VT No. 16-0074



16-0117



16-0105



16-0711



16-0126



16-0965

Needle Bearing Bushing Race Press Tools.


VT No.	OEM	Fits	Item	Use
16-0117	31735	1936-84 BT	Bushing	Md gear
16-0057	34733	1977-84 BT	Needle	Countershaft
16-0965	97080-77A	1977-E81 XL	Race	Pinion
16-0126	97272-60	1958-up BT	Needle	Cam
16-0127	97273-60	1957-up XL	Needle	Cam
16-0711	Cover	1970-up BT	Bushing	Cam
16-0105	33428A	1979-84 BT	Needle	Mainshaft 4sp
16-0036	34734	1979-up BT	Bearing	Mainshaft 5sp
16-0028	34810	1984-90 XL	Bearing	Mainshaft
16-1732	—	1936-84 BT	Bushing	Kicker Cover
16-0055	34190	83-up FXR	Fork Bushing & Seal	
16-0056	34634	84-up FLT FXWG-FXST	Fork Bushing & Seal	
16-0964	36583	87-up FXR 1988-up XL	Fork Bushing & Seal	



16-0425



16-0065

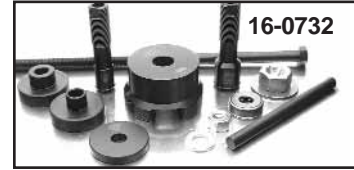


16-0732

Driver Handle. Replaces 33416 to drive wheel race, crank bearing race and cam needle installers.

Wheel Race Puller. Replaces service tool 33071, for hubs with tapered races 1973-up. All models.

VT No.	Item	Year
16-0425	Puller	1973-99
16-0065	Driver	1973-99
16-0732	Puller	2000-up

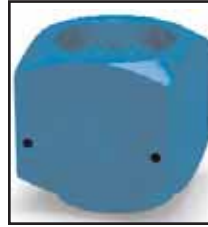

49mm Fork Seal and Dust Shield Installer Tool installs the lower leg 49mm fork seal squarely into the bore with no damage to the lip seal surface. Also installs dust shield cover. It is a two-price design to aid in some assembly applications.
VT No. 16-1369




25 mm Wheel Bearing Puller Tool removes new front 25 mm wheel bearings found on most of the 2007 ST models with 25 mm front wheels bearings. Note: this tool must be used with the current Jims wheel bearing/remover tool.
VT No. 16-1370



Seal Driver Kit quickly installs seal without damage, includes 16 adapters for seals up to 3 3/8" diameter. Includes special adapters for "shielded" seals.

VT No. 16-0069

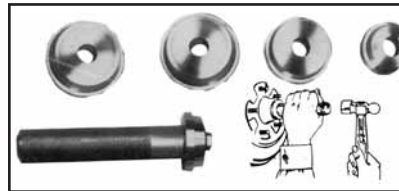

Bearing Race & Seal Driver includes driver handle and 6 machined aluminum collets to fit most bearings.

VT No. 16-0505



Generator Gear Puller Center Cap use with claw type pullers. OEM# 95636-46.
VT No. 16-0638



Cross Arm Puller is 1" square bar 43/4" long slotted, with 3/8" x 16 bolts, use any size bolt to pull gears and sprockets that have 2 tapped holes, or use with bearing separator 16-0602.
VT No. 16-0499



16-0712

Mainshaft Starter Clutch Gear Puller for 1936-84 4 Speed model.

VT No.	Brand
16-0712	V-Twin
16-0740	Jims