


V-Twin Mfg.
MECHANICAL BRAKE CONTROL KIT
FITS 1936-1957 BT
VT No. 22-0706 Chrome
VT No. 22-0707 Parkerized

This is a custom application and rider safety depends on proper installation. This product should only be installed by a knowledgeable and trained motorcycle technician. V-Twin Mfg. accepts no responsibility for improper installation.

The Mechanical Brake replacement Kit is for use on 1936-1957 BT Models. The kit is perfect for finishing a restoration or for forward controls on a custom rigid frame. The kit is for use on mechanical brake frames with a cross shaft tube only. The kit includes all hardware for installation. The kit also allows the use of stock floorboards.

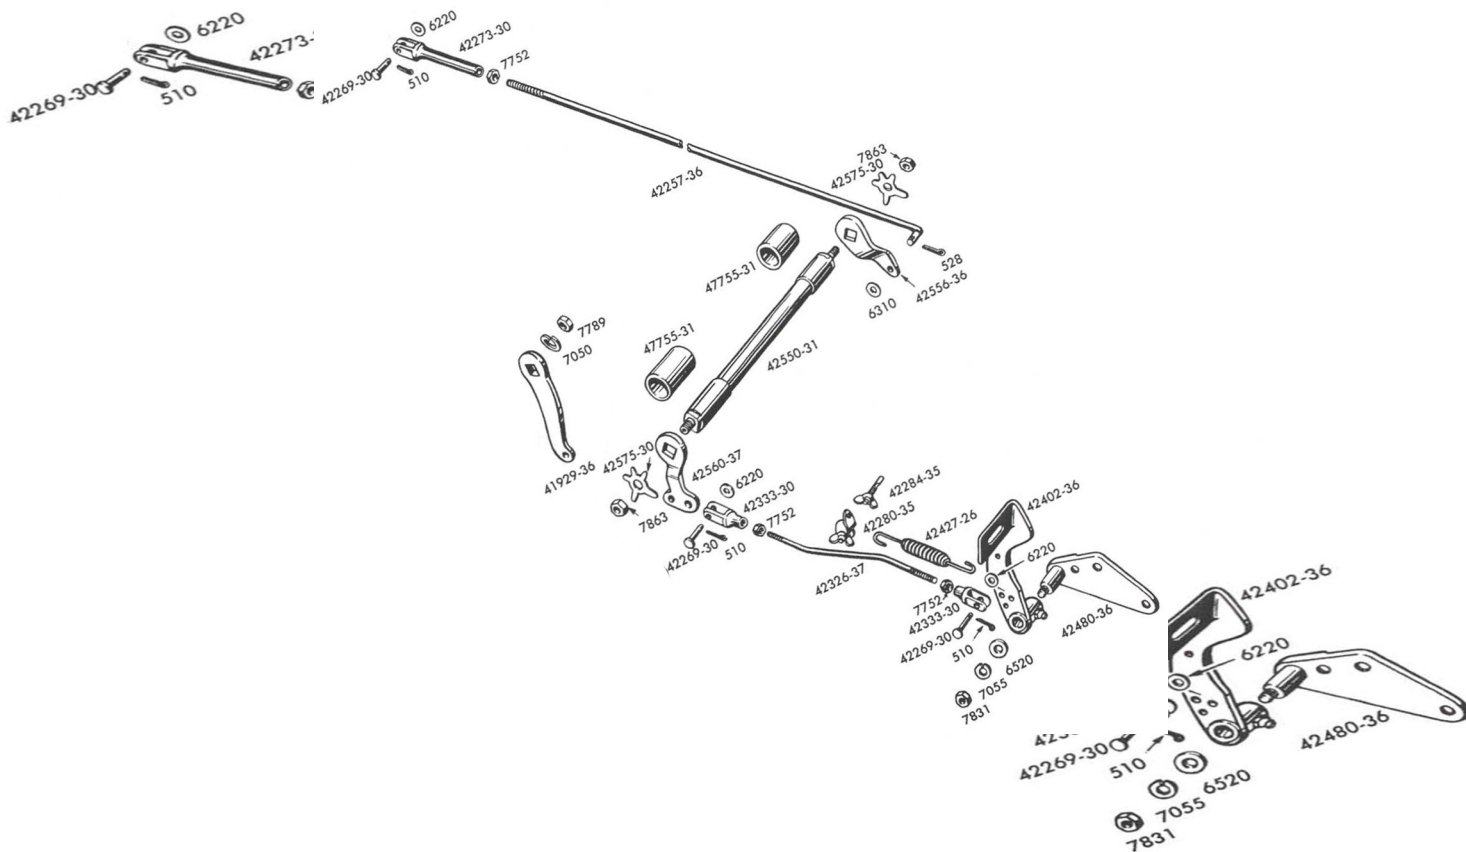

Parts List:

Item	OEM #	VT No. Parkerized	VT No. Chrome	Description	Qty
1	42402-36	23-0456	23-0104	Brake Pedal	1
2	42480-36	23-0446	23-0105	Pedal Mount Plate	1
3	42560-37	23-0447	23-0426	RH Bell Crank (2 hole)	1
4	42556-36	23-0448	23-0427	LH Bell Crank	1
5	41929-36	23-0449	23-0428	Rear Brake Lever	1
6	42326-37	49-2551	23-0422	Front Brake Rod (short)	1
7	42257-36	23-0903	23-0902	Rear Brake Rod	1
8	42333-30	23-0443	23-0424	Short Clevis (2 used)	2
9	42273-30	23-0444	23-0425	Long Clevis	1
10	42550-31	23-0419	23-0419	Crossover Shaft	1
11	7863, 42575-30	9677-4	8409-4	Brake Shaft Nut & Lock Kit	2
12	42269-30, 6220, 510	23-0464	23-0421 (Zinc)	Clevis Pin Kit (3 used)	3
13	7831	200-024	In 23-0105 kit	7/16-20 x 1/4" Jam nut	1
14	7055	400-048	In 23-0105 kit	7/16 Lockwasher	1
15	6520	400-032	In 23-0105 Kit	7/16 Flat washer	1
16	7752	200-012	37-8113	5/16-24 Jam nut	3
17	6310	400-012	37-9273	5/16 Flat washer	1
18	528	600-009	37-8786	Cotter Pin	1
19	42427-26	13-0150	13-0173	Foot brake lever spring	1
20	7050	400-010	37-9056	3/8 Lockwasher	1
21	7789	200-006	37-0009	3/8-24 Nut	1