


Rear View Of Motorcycle With Kit VT No. 22-0773

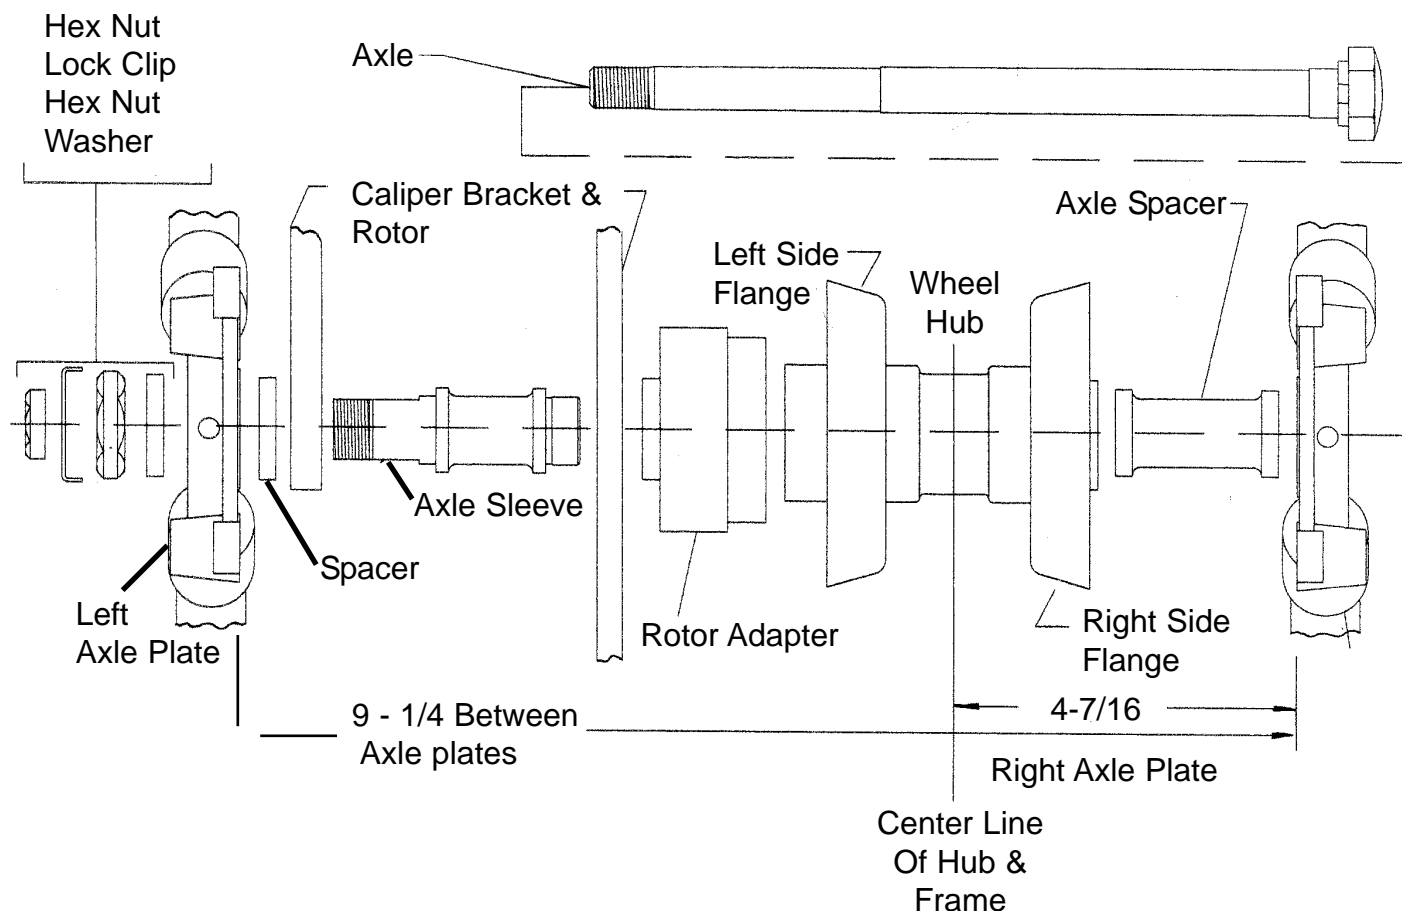

- 1) Remove axle, rear wheel, axle sleeve & brake drum.
- 2) Modify axle plate width to 9-1/4 inches as shown.
- 3) Remove mechanical brake stay portion of the left axle plate for caliper clearance.
- 4) Assemble the spacer, caliper bracket, axle sleeve, rotor, adapter, wheel, spacer & axle as shown.
- 5) Locate caliper stay on frame leg and weld.

Parts List

VT No.	Description	Qty
44-0856	# Alloy Adapter 1936-66 BT	1 ea
23- 0441	Brk Drum Dowel Pin Set 1937-72 BT R	1 pk
44-0857	# Axle Sleeve W/Thread	1 ea
22-0373	Edart Caliper/Sprocket Kit with 49T	1 kit
44-0321	Rear Axle Spacer; Chrome	1 ea
8160-4T	# Chrome Rear Axle Nut & Lock	1 ea
44-0878	# Sleeve Collars	1 ea
44-0789	# Rigid Axle 1936-57	1 ea

This is a custom application and rider safety depends on proper installation. This product should only be installed by a knowledgeable and trained motorcycle technician. V-Twin Mfg. accepts no responsibility for improper installation.