

# VT NO. 27-0798

## Forward Mount Operator Footboard Kit

Proper installation of this kit also requires installing your current pad or a **new** footboard pad (sold separately) to each footboard.

This kit contains the following items:

QTY	DESCRIPTION
1	Footboard (right)
1	Footboard (left)

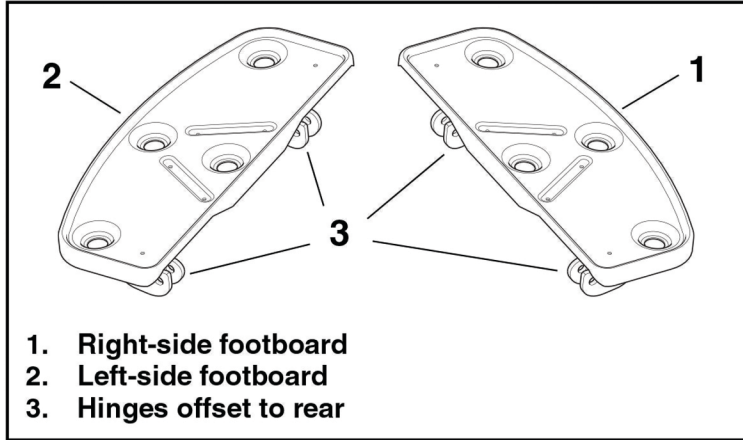


Figure 1. Forward Mount Operator Footboards

### Installation

#### Original Footboard Removal

*NOTE*

If **new** rubber pad inserts are being installed, begin with Step 2.

1. Tilt the operator footboard upward. From the bottom of the footboard, use a large flat blade screwdriver to push the four rubber anchors on the pad up through the holes in the footboard.
2. Remove and retain the nuts from the pivot bolts at the underside of the footboard.
3. Remove the pivot bolts to release the footboard from the brackets. Retain the bolts for re-installation.

#### Forward Mount Footboard Installation

*NOTE*

The **new** footboards are side-specific, and are designed to be mounted with the hinges offset to the rear, which places the footpads forward of the standard location.

4. See Figure 1. Select the correct footboard from the kit. Place the footboard into position between the brackets, and install the pivot bolts from the outboard sides of the hinges.
5. Install the nuts onto the pivot bolts, and alternately tighten to 84-108 **in-lbs** (9.5-12.2 Nm).

#### Footboard Insert Installation

6. Apply liquid dishwashing soap to the rubber beads on the footboard insert.
7. With the footboard in the “up” position, place the insert into position on the footboard pan, and hold it firmly in place.
8. From the underside of the footboard, use a pliers to pull each rubber isolator into its mating hole in the footboard pan until the thick collar emerges.
9. Repeat the above steps for the remaining footboard and insert.