


VT No. 27-0811 FLT 2" Floorboard Extension Kit, Chrome
VT No. 27-0812 FLT 2" Floorboard Extension Kit, Black

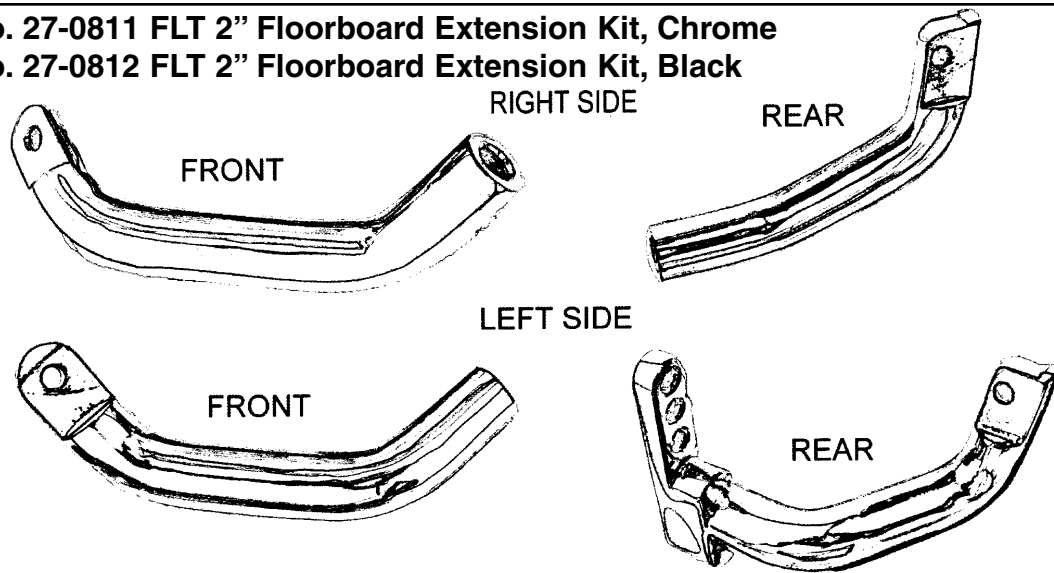

Parts:

- 4 - Relocation brackets
- 3 - 1/2-13 x 1 allen socket head bolts
- 3 - 1/2 lock washers
- 2 - 5/16-18 x 1 hex head bolts
- 2 - 5/16 lock washers
- 2 - 5/16-18 hex nut
- 1 - 8773-12T floorboard bolt set
- 1 - instructions

1. Remove OEM floorboards and brackets.
2. Install relocation brackets in reverse order of removal using OEM hardware. Leaving loose.
3. Install floorboards. Tighten brackets then floorboards to OEM specs.

This product should only be installed by a knowledgeable and trained motorcycle technician. V-Twin Mfg. accepts no responsibility for improper installation.