

Stabilizer Link


For 2009-UP FLT

31-0010


Parts:

- 1- Stabilizer Link
- 2- 3/8-16x 1" Allens
- 1- Zinc Washer
- 1- Nylon Washer

1. Remove OEM Stabilizer Link
2. The left hand side of the Stabilizer Link will have the shorter tapered end.
3. In pictures 1 and 2 you will see a steel zinc plated washer, and a black nylon washer. Install these both in the recess in the right hand side of the stabilizer link. The right hand side has longer tapered end. Just like you see in picture 2. Using socket head provided with blue loctite torque both left and right sides to 35-40 foot pounds.

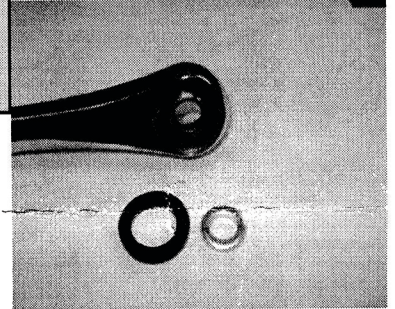

Picture 1

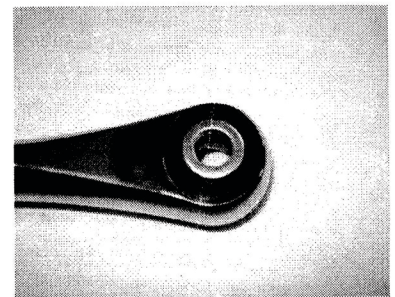

Picture 2