
V-Twin Mfg. **Accel Starter Solenoid Zinc** VT Part No. 32-0633

This is a custom application and rider safety depends on proper installation. This product should only be installed by a knowledgeable and trained motorcycle technician. V-Twin Mfg. accepts no responsibility for improper installation.


Installation Instructions:

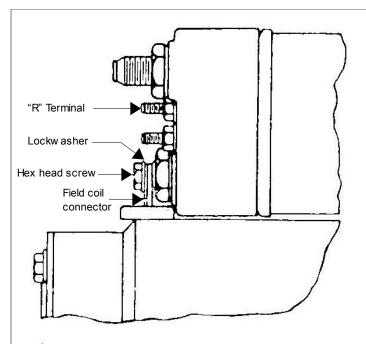


For the field coil connection use short hex head screw and For field coil connection use long hex head screw, lock lock washer. If old unit did not have "R" terminal, disregard.

Never remove cap of solenoid or loosen terminal mounting nuts. Make Certain to install return spring.

Note: The larger terminal connects to the battery.

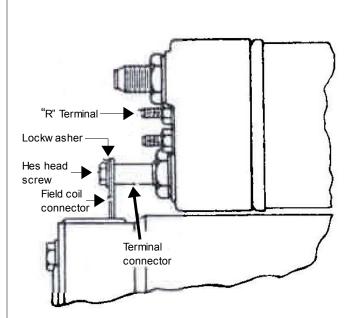

washer & copper tube as per illustration. If old unit did not have "R" terminal, disregard.

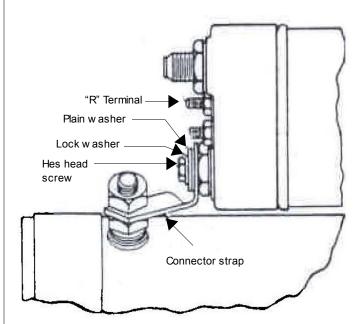

For field coil connection use short hex head screw, lock washer and plain washer. If old unit did not have "R" terminal disregard.