



## DISCONNECT THE BATTERY FIRST!


Once the Molex Connectors have been removed from your handlebar switch harness, simply match the colored wire with the mating terminal found on the extension harness. Be sure to cover the terminals with the 3" long heat shrink allowing 1/2" overlap on each side. Heat the shrink tubing in place on each terminal splice and allow the tubing to cool for a few minutes before reinstalling. When all connections have been made, cover the extension harness with the heat shrink provided.

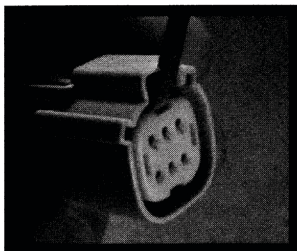


1. Place a small blade style screw driver into designated pry point.

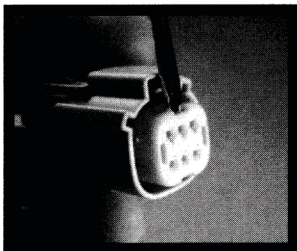


2. Pry outward on the screwdriver in order to release the TPA.

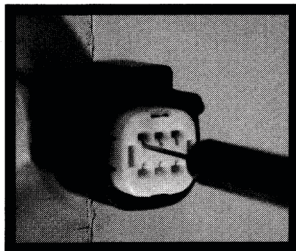


3. Once TPA slides forward, insert removal tool and push terminal while pulling wire to remove from connector housing.

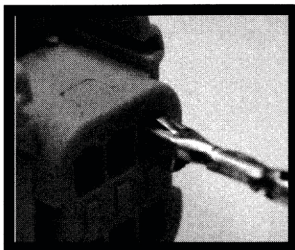

1. When re-installing terminals be sure to check for proper terminal alignment.

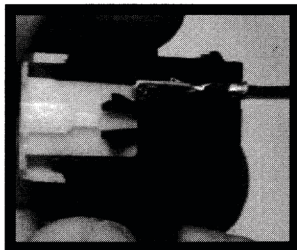

2. Once terminal goes into housing, push in until a click is heard.

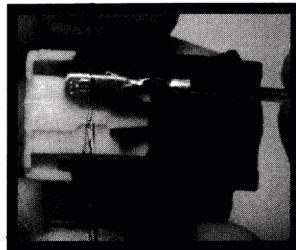

3. Now pull wire back to engage terminal with the connector. Push the TPA in order to lock all terminals in place.

Harley Davidson Handlebar Controls, (Baggers)  
2007 - Up

### Left Side

ORANGE/BLACK  
GRAY/GREEN  
GREEN/BLUE  
PINK/WHITE  
BROWN/BLACK  
VIOLET/BLACK  
YELLOW/BLACK  
WHITE/VIOLET  
WHITE  
BLUE  
YELLOW  
ORANGE/WHITE  
BLACK  
BLACK/RED

### Right Side

ORANGE/WHITE  
RED/BLUE  
GRAY  
WHITE/BLACK  
WHITE/BROWN  
BLACK/RED  
BROWN/WHITE  
GRAY/WHITE  
PINK/WHITE  
VIOLET/BLACK  
WHITE/BLUE  
BLUE/BLACK