

## VT No. 33-0624


LED Taillamp includes clear LED for license plate illumination

1. Remove stock taillight from fender. Cut lead wires as close to the light as possible.
2. On the factory fender, you will be cutting out the hump where the stock light was mounted. Use the template provided to mark the square opening and two 1/4" holes.
3. Tape off area to be cut and blanket the surrounding area. Noted, when you cut out the hump you will end up with a square opening of 2 1/4" by 3 3/4" with a cut-off wheel, cut out the square hole as per template. Clean up the cut by filing down the sharp edges created by the cut-off wheel.
4. Drill out the two 1/4" holes as per template provided.
5. Mount your new LED taillight to the fender using inside fender mounting plate as provided. Connect the new LED taillight to the factory lead wires using connectors provided make sure you secure lead wires away from wheel or other moving parts. Enjoy your new light.

Red Wire - Connect to taillight feed wire (Running Light)

Blue Wire - Connect to brake feed wire (Brake Light)

Black Wire - Connect to a good ground or battery (Negative) terminal

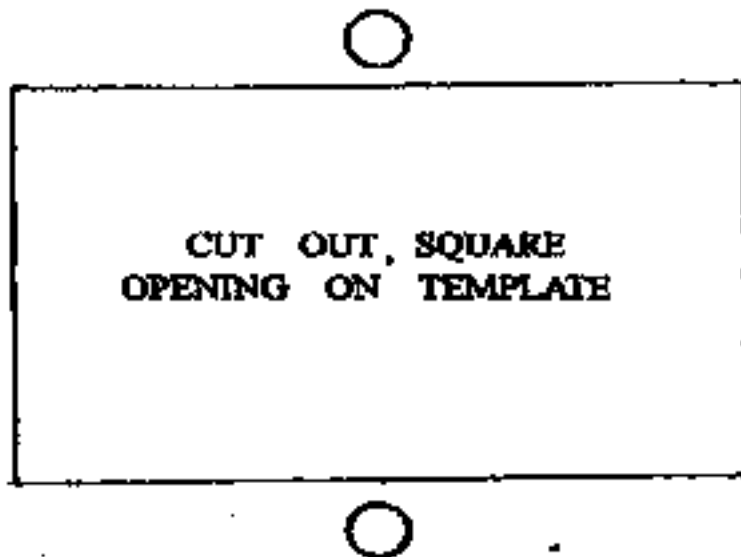

This product should only be installed by a knowledgeable and trained motorcycle technician. V-Twin Mfg. accepts no responsibility for improper installation.

