


Cam Cover Trim Kit for 1983-90 XL

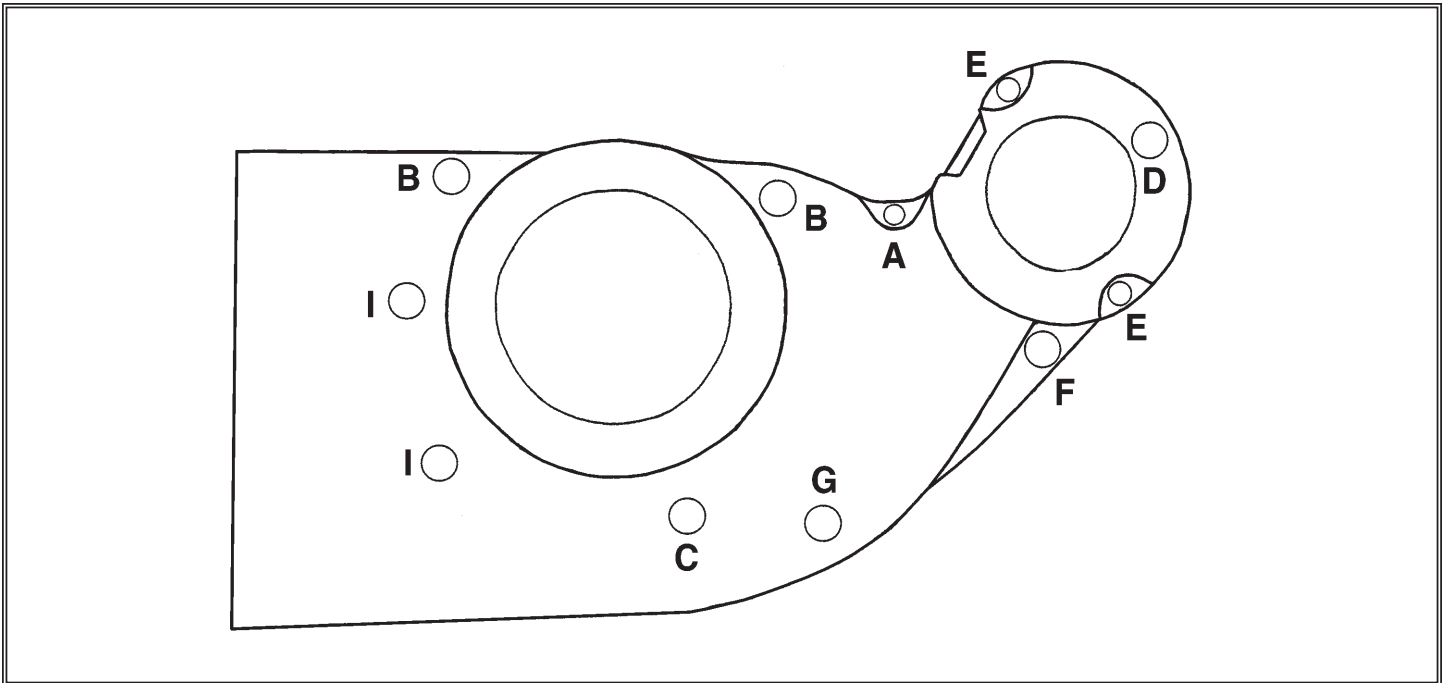

VT No. 42-0110

Kit includes:

VT No.	Qty	Item
	1	Cover
37-8462	2pc	
37-8709	2pc	
37-8707	2pc	
37-8308	2pc	
37-8306	1pc	
37-8307	1pc	

Fitment Instructions:

- A:** VT No. 37-8306 1 3/4" Chrome Long Screw (1)
- B:** Install Chrome 1 3/4" Long (2) Buttonhead screw under cover
- C:** Install 2 1/4" Chrome Buttonhead
- D:** Install 2 1/4" Chrome Buttonhead
- E:** Install 3 1/2" Allen, Chrome
- F:** 1 3/4" Long Screw leave installed
- G:** VT No. 37-8307 Chrome Long Chrome Screw (1)
- I:** VT No. 37-8308 Long Chrome Screw, 2 1/4" (2)
- J:** Hole for Breather Valve may have to be cleared before assembly