


VT No. 42-9963

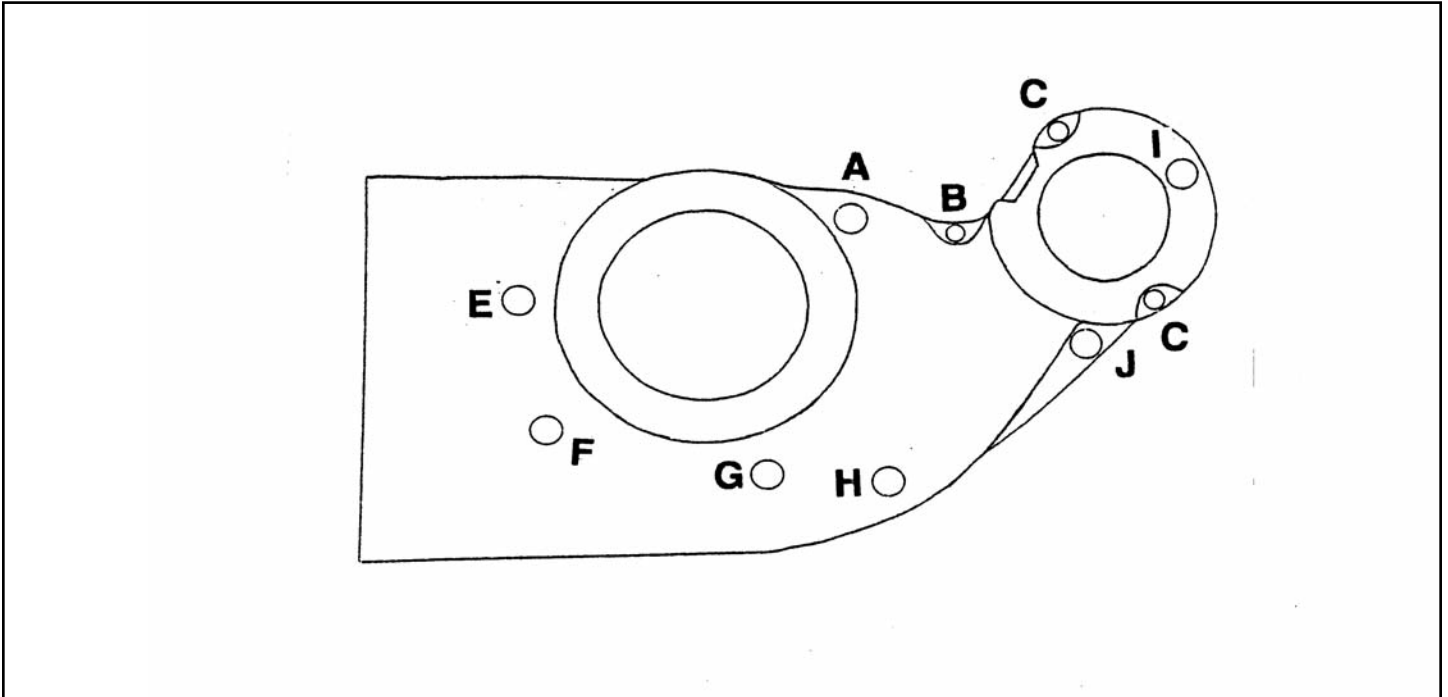

1981-82 XLH Model Cam Cover Trim Kit

VT No. 42-9963

V-TWIN CUSTOMIZER CHROME COVERS fit over existing cam covers in 1979-82 XLH models.

Do Not Remove Actual Engine Cam Cover to Install This Kit

Kit includes the following

Location	Qty	Item
	1	Chrome Steel Cover
A	1	1/4 x 1 3/4 Buttonhead Screw, Chrome, VT No. 37-8707
B	1	1/4 x 1 3/4 Buttonhead Screw, Chrome, VT No. 37-8707
C	2	5/16 x 24 x 3 1/2 Allen Head, Chrome, VT No. 37-8463
E-F	2	1/4 x 2 1/4" Allen Chrome, VT No. 37-8308
G-H-I	3	1/4-2" Allen Chrome, VT No. 37-8307
J	1	1/4-20 x 1 1/4 Allen Chrome, VT No. 37-8304

Remove and replace the screws in position A+B with 1/4 x 20 buttonheads provided. Remove the two generator screws and install the two 5/16 x 24 allens supplied in C holes. Replace other screws as noted in chart.

