


XL Cam Cover Trim Kit 1991-up

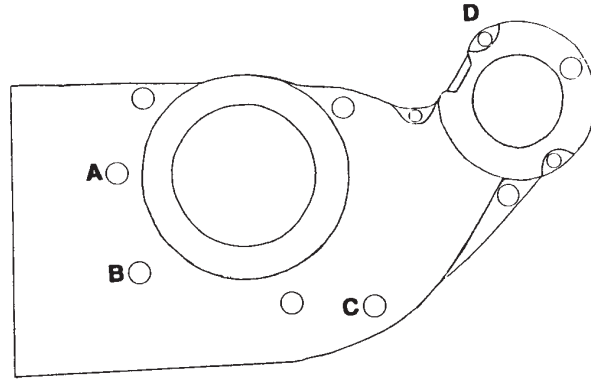

VT No. 42-9975

Kit includes

1 Chrome Cover

Fitting Instructions: Remove stock screws in Position A, B, C, D only and reinstall, using stock washers, tighten all screws to original specifications. Leave all other screws in place.