


SADDLEBAG MOUNT PLATE RAIL KIT
VT 50-1562
INSTALLATION INSTRUCTIONS


This is a custom application and rider safety depends on proper installation. This product should only be installed by a knowledgeable and trained motorcycle technician. V-Twin Mfg. accepts no responsibility for improper installation.

1. Choose an appropriate template from page 2, 3, or 4.
Page 2 for use with VT 48-0189 Saddlebag Mount Plate.
Page 3 for use with VT 48-0176 Saddlebag Mount Plate.
Page 4 for use without a Saddlebag Mount Plate.
2. Measure the distance between the 6.00" lines on the template to determine if any scaling has occurred by electronic transfer or printing. If the lines are not 6.00" apart, the template must be scaled with a copy machine so that the distance between the 6.00" lines is correct.
3. Cut out the paper template and locate it on the right side fender skirt at the edge of the skirt and the joint at the hinge.
4. Tape the template to the fender.
5. Mark the location of the holes and remove the template.
6. Reverse the template and tape it to the left side fender skirt as was done earlier to the right side.
7. Drill the number holes indicated on the template in the right and left fender skirts.
8. Install the saddlebag mount plates, appropriate number of through hole stanchions, four end stanchions and rails. NOTE: The rails must be cut to length for use with the saddlebag mount plates.

TEMPLATE FOR USE WITH
SADDLEBAG MOUNT PLATE
VT 48-0189
PAGE 2

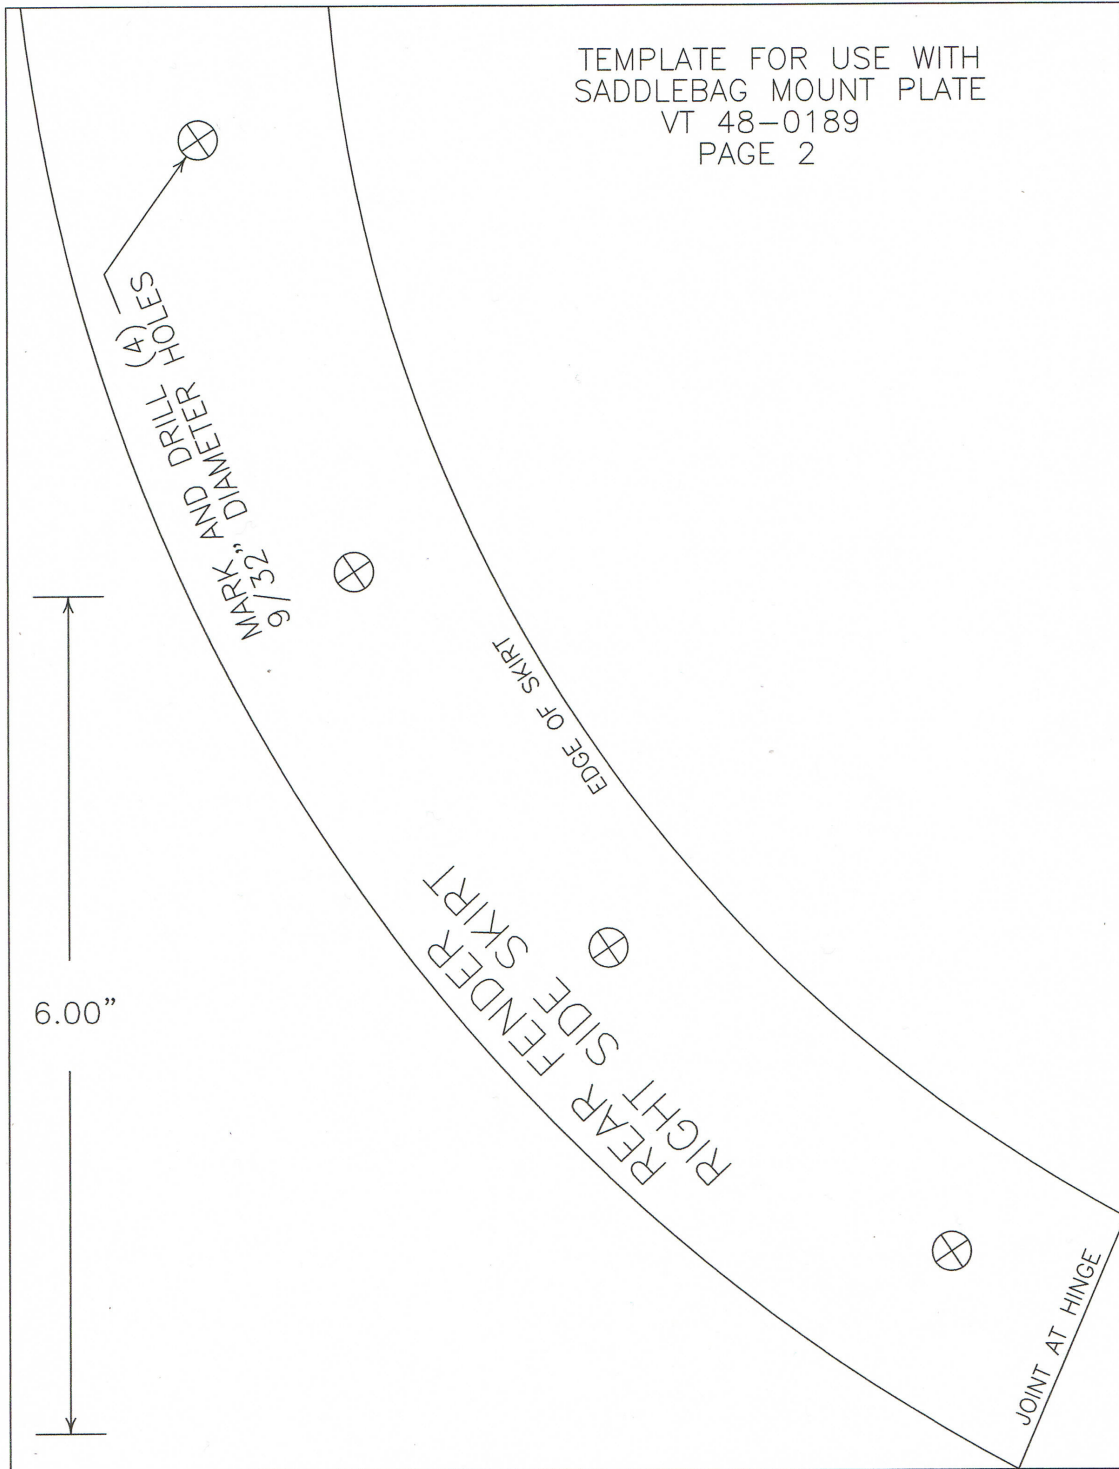

TEMPLATE FOR USE WITH
SADDLEBAG MOUNT PLATE
VT 48-0176
PAGE 3

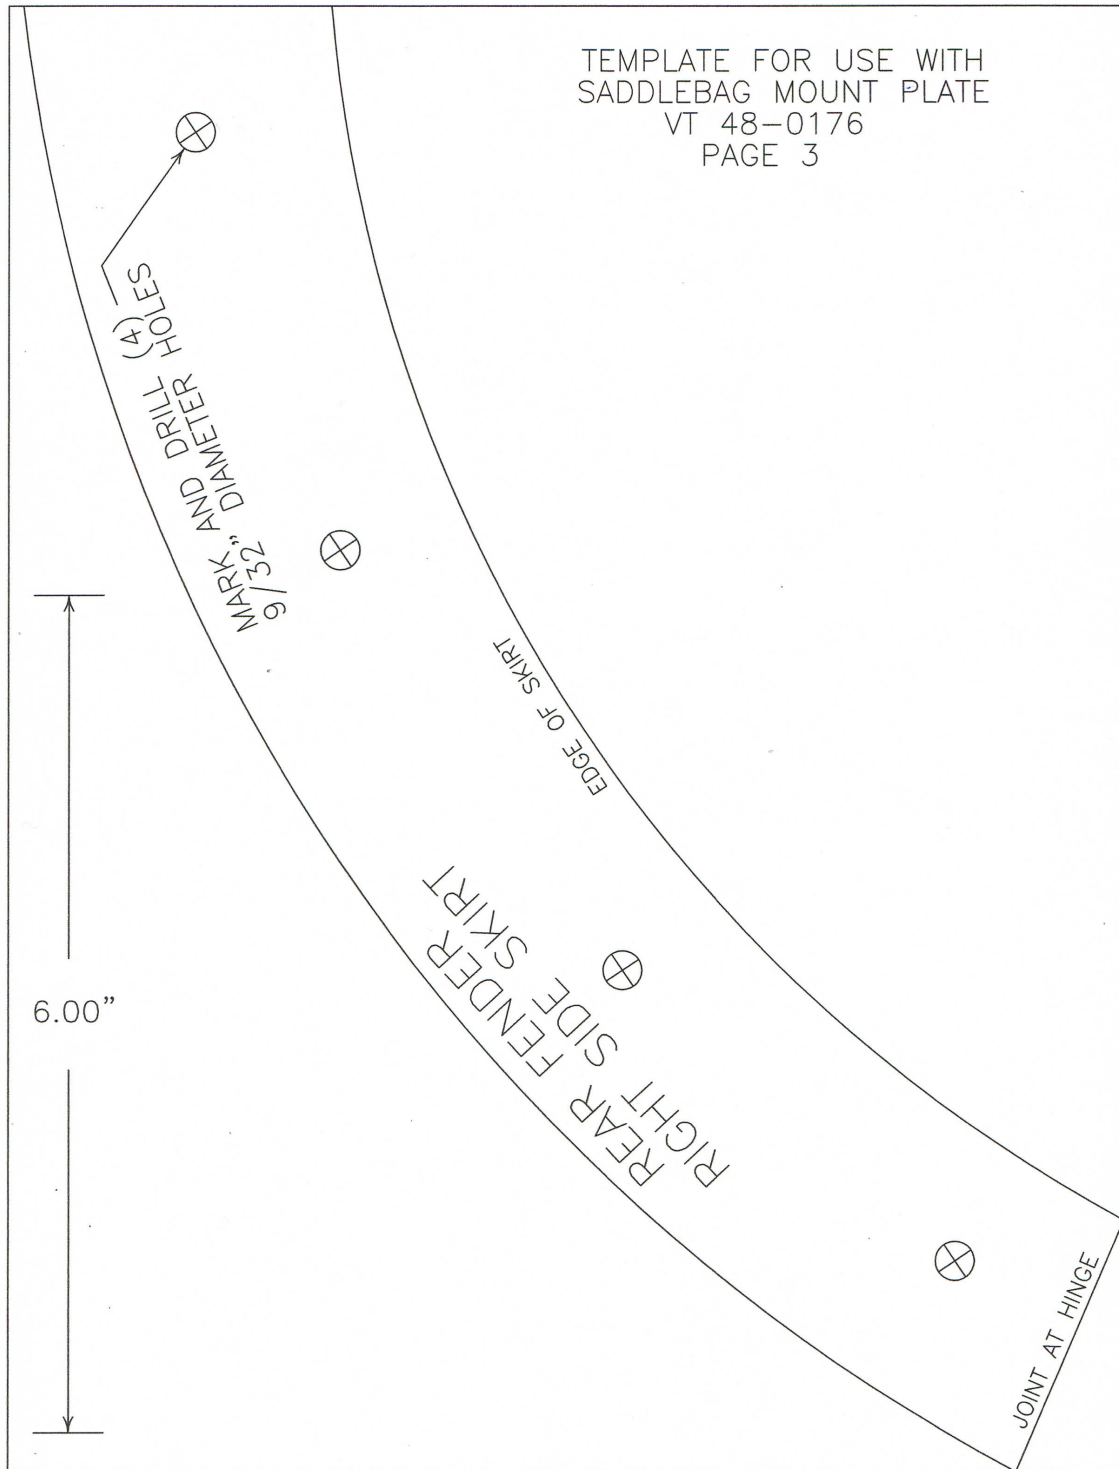

TEMPLATE FOR USE WITHOUT
SADDLEBAG MOUNT PLATES
PAGE 4

