



# Front Master Cylinder

Front Master Cylinder Assemblies complete with internals and lever, assembled.

VT No.	OEM	Item	Finish
<b>1972-81</b>			
26-0624	45010-73	Assembly	Chrome
26-2099	45010-73	Assembly	Polish
26-0513	Vertical	Sw Housing 1973-81	Chrome
26-0631	Horizontal	Sw Housing 1972 only	Chrome
26-0514		Smooth Cvr	Chrome
23-1719	45063-72	Rebuild Kit for Above	

## 1982-95

26-2145	45013-82A	3/4" Bore, 10mm bolt	Chrome
26-2153	As Above		Black
26-2120	45019-85	5/8" Bore, 12mm bolt	Chrome
26-2122	As Above		Black
26-2166	45013-85B	11/16" Bore, 12mm	Chrome
26-2154	As Above		Black
26-2146	45044-82	Clamp	Black
26-2147	45044-82	Clamp	Chrome
26-0400		Screw Kit for Clamp	
32-7782	71574-82	Front Brake Switch	
23-1716	45063-82	Rebuild kit 3/4"	
23-3021	45069-84	Rebuild kit 5/8"	
23-3020	45006-87A	Rebuild kit 11/16"	

## 1996-2003

26-2179	45013-96	Complete 11/16" bore DD	Chrome
26-2180	45019-96	Complete 9/16" bore SD	Chrome
23-1714	45006-96	Rebuild Kit 9/16"	
23-1715	45072-96	Rebuild Kit 11/16"	
26-2163	45044-96	Clamp	Chrome

## 2004-06 XL Only

26-0576	42307-04	Complete SD	Chrome
26-2201	45052-04	Complete DD	Chrome
23-1788	42803-04	Rebuild Kit (SD)	
23-1787	42809-04	Rebuild Kit (DD)	

## 2008-up Touring

23-1055	44551-08	Dual Disc	Chrome
---------	----------	-----------	--------

## Rebuild Kit





Handlebar Master Cylinder Rebuild Kits. Each kit contains parts necessary for complete rebuild.

VT No.	OEM	Years	Fits
23-1738	Complete	1972-81	All
23-1988	Fitting	1972-81	All
23-1719	45063-72	1972-81	All
23-1739	Deluxe	1972-81	All
23-1716	45063-82	1982-85	3/4" Bore
23-3021	45072-87	1985-95	All 5/8" Bore
23-1714	45006-96	1996-2003	9/16" Bore
23-1715	45072-96	1996-2003	11/16" Bore
23-1787	42803-04	2004-up XL	Dual
23-1788	42809-04	2004-up XL	Single
12-0984	11063	Retaining Ring	1972-81
23-0590	45059-72	Spring Cup	
23-0825	45056-77	Piston Cup	
28-2002	45042-82	Fluid Level Window with seal	1982-2005
13-0152	45071-72A	Plunger Spring	1972-81



**OEM-Handlebar Master Cylinders**  
 11/16" bore, 1985-95 Dual Disc Models  
 7/16"-24 banjo bolt  
 5/8" bore, 1985-95 Single Disc Models  
 3/8"-24 banjo bolt  
 3/4" bore, 1982-84 Dual Disc Models  
 3/8"-24 banjo bolt  
 11/16" Bore, 1982-2002 Dual Disc Models  
 3/8"-24 banjo bolt  
 1972-81 FL, FX, XL  
 1/8" NPT

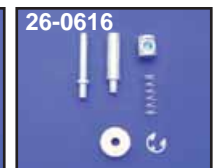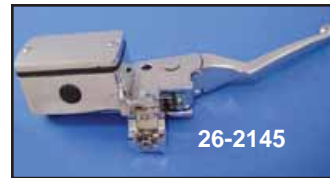


**Master Cylinder Plunger Assembly Complete Kit** includes all parts pictured. Fits 1972-81.

VT No.	Type
26-0547	W/MC Rebuild
26-0616	Hardware Only

## 1982-95 Front Brake Pushrod Parts.

VT No.	OEM	#	Item
26-2141	Kit	A&B	Rod Barrel Set
	45051-82	A	Pushrod
	45031-82	B	Pivot Barrel
26-2139	45031-82	B	Pivot Barrel, 10 pk

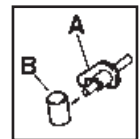

**Brake Hose Fittings** for front master cylinder, chrome.

VT No.	OEM	Model	Type
26-0622	43307-78	FX-XL	Angle
23-1988	63609-72	FLH	Straight
23-0517			Converts 10mm late threads to 1/8" NPT with inverted flare, early thread hose type, straight.

MULTI FIT/CHOPPER