



Passenger Footboards



Chrome FLT Rear Passenger Footboard Mounts replace 52719-93 and 53070-00 for 1993-up models FLT, FLHT and FLHS. Order boards and mats separately.
VT No. 27-0561



1993-up FLT Rear Passenger Peg Brackets are adjustable type to replace stock rear footboards. Order male pegs separately.


- | VT No. | Item |
|---------|-------------------------|
| 27-0517 | Peg Brackets |
| 27-1586 | Large Soft Pegs (shown) |
| 27-0564 | Kit |



FLT Passenger Footboard Kit. Footboards fold up when not in use. Kit includes footboards and mounting hardware. Fits all 1993-up FLT models.
VT No. 27-0085



1987-up Stock Black Passenger Footboard Rubber have a square rib design. Fits factory passenger floor boards. Each.
VT No. 28-2120

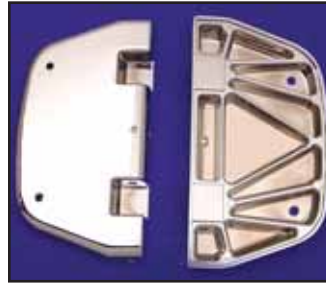

Chrome Replica Rear Passenger Floorboards fit all OE style brackets and accept rubber pads from 1986-up.

- | VT No. | Item |
|---------|--------------|
| 27-0500 | Board |
| 27-0693 | Flame Insert |



Chrome Billet Rear Passenger Footboards fit 1986-up FLT models. Chrome insert features inlay rubber pad.
VT No. Type
27-0931 Diamond
27-0932 Rib
27-0933 Flame




Chrome Trim Footboard Rubbers fit 1993-up FLT models, pair. Units pop into stock footboard base.
VT No. 27-0580



FLT Chrome Passenger Footboard Covers fit fold up type factory cast boards. Includes 2 covers with 4 self tapping screws.

VT No. 27-1599

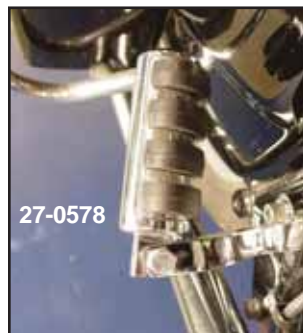

1993-up FLT Rear Peg Kit includes chrome brackets and large soft peg set. Replaces rear passenger floor guards.
VT No. 27-0578