


Rear Passenger Footboard Set

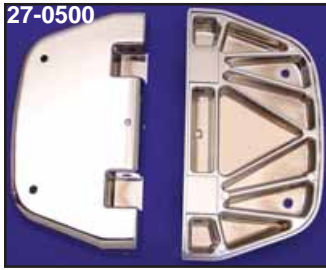

Chrome Replica Rear Passenger Footboard Set fit all OE style brackets and will accept rubber pads from 1986-up.


- VT No. Item**
27-0500 Board Set Only
27-0693 Flame
27-0815 Board/Rubber
27-0803 Pin Set



Passenger Footboard Pin Kit includes 4 pins, 2 balls and 2 springs. Fits 2004-up Touring rear footboards.
VT No. 27-0803



Passenger Peg Mount Kit mounts to rear existing mount to accept a male peg set. Kit allows 360° rotation to raise or lower peg height.
VT No. 27-1523

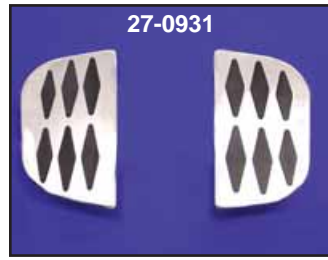

Chrome Billet Rear Passenger Footboards fit 1986-up FLT models. Chrome insert features inlay rubber pad.

- VT No. Type**
27-0931 Diamond
27-0933 Flame



Chrome Trim Footboard Rubbers fit 1993-up FLT models, pair. Units pop into stock footboard base.
VT No. 27-0580



FLT Chrome Passenger Footboard Covers fit fold up type factory cast boards. Includes 2 covers with 4 self tapping screws.

VT No. 27-1599