




# Driver Footboards

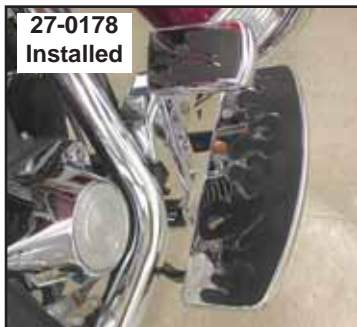

**Flamed Footboard Set.** Chrome plated footboards with black molded rubber insert. Fits 1980-up FLT, 1986-up FLST.  
VT No. 27-0178



**Streamliner Footboard** fits 1980-up FLT, FLST.  
VT No. 27-0501



**Chrome Footboard Trim.** Footboard Set inserts are fitted to an iso-mount footboard top to fit 1974-up FL-FLT-FLST  
VT No. 27-1705



**Chrome Billet Footboard Pads** include Iso bushings for 1966-up Big Twins.  
VT No. 27-0570



27-0907



27-0908



27-1562



27-0900

**Oval Style Shape Footboards** fit the stock mounting brackets on 1940-84 FL. Footboards replaces 50603-40.

VT No.	Finish	Mats
27-0907	Black	Rubber
27-0908	Chrome	Rubber
27-1562	Chrome	Metal
27-0900	Chrome	H-D Logo



**Forward Mount Footboard Pans** will extend the rider to a more comfortable position pans accept original or accessory board inserts. Replacing 50409-04.  
VT No. 27-0798



**Flame Footboard Inserts** or available as complete board set. Fit 1980-up FLT.

VT No.	Item
27-0584	Inserts
27-0692	Complete Board Set



27-0904



27-0903



27-0918

**Chrome 'D' Shaped Footboards** include rubber pads. The 1974-up Iso boards feature a raised footboard pad with anti-vibration rubbers. Sold in pairs.

VT No.	OEM	Year/Model	Type
27-0904	50603-66	1966-73 FL	Solid
27-0903	50603-74A	1966-85 FL	Iso Type
27-0918	Kit	1966-85 FL	With brackets
27-0906	50621-79	1979-up FLT	Iso Type
		1987-up FLST	



**Chrome 'D' Shaped Footboards** feature ISO design with rubber inserts in stainless steel grid. Pair.

VT No.	Year	Model
27-0923	1979-up	FLT
	1986-up	FLST