



# Footboard Brackets



**1983-up Chrome FLT Footboard Mount Set** is a 4 piece set.  
VT No. 27-1726



**Footboard Mount Kit** for aluminum primary models 1965-84 FL-FX, when using custom pipes, includes extended front footboard bracket for needed clearance.  
VT No. 27-0599




**Rear Footboard Brackets** fit 1970-84 FLH, 31-0098 is for use with drag or custom pipe sets when footboards are used. Zinc plated.

VT No.	OEM	Type
27-0596	50655-70	Stock
31-0098	Custom	Drag Pipe



**Aluminum Primary Footboard Mounting Kit** fits BT 1965-84 FLH-FXE models equipped with FL type forward controls and primary cover with footboard tab.

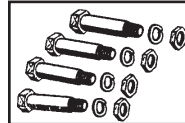


**Footboard Bolt Set.** 4 piece set of hinge bolts with nuts. Replaces 50635-14.

VT No.	Type
8773-12	Cadmium
9685-12	Parkerized
2125-12	Zinc

VT No.	OEM	Item/Note
27-0606	Complete	Kit
27-0636	50657-70A	Right Front Stud, short
27-0596	50655-70	Right Rear Bracket
27-0637	50658-70A	Left Front Stud, long
27-1621	50659-70	Right Front Stud


**Note:** (A) includes extended rear footboard bracket when using custom drag or muffler pipes.

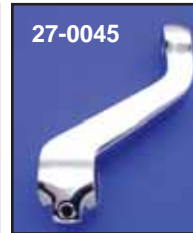

**Chrome Splined Footpeg Supports** for FX-FL.

VT No.	OEM	Side/Item	Type
27-0055	52695-77	Left, Support	Straight
27-0045	52700-65	Right, Support	Offset
27-1563	52688-65	Right, Bracket	Plate
42-0630	60513-71	Left, Chr Inspt. Cover	With spline
37-0155	2356	Chrome Screws	For Above
27-0046*	50921-83	FXR Stud	With spline
12-0201	23985-18	Key for Above	

**\*Note:** Stud is keyed for positive mount.



**Footboard Tabs** can be welded on 1936-84 Big Twins. Available in stamped or authentic forged steel construction for custom or stock frames. Sold in pairs.

VT No.	Dia.	Type
27-1560	1 1/8"	Forged, exact
27-0311		Stamped tabs
27-0664	1"	Forged, exact



**Pre1984 Big Twin Footboard Boot Guard** available for all Big Twins using "D" shaped style footboards. The right side guard keeps the heel of your shoe from the hot exhaust pipe. Both

sides provide 90 degree of resting position and also prevent your feet from sliding off the back of the footboards.

VT No.	Fits
27-0150	Right and Left
27-0151	Right Side Only

# Footboard Trim



**Chrome Footboard Deco Trim** fits 1966-up FL-FLT boards, set is complete for two boards, drill template included.

VT No. 27-0505



27-1562



27-0911

**Chrome Footboard Insert Set** with rib design for deco look. Pairs.

VT No.	Years
27-1562	1940-65
27-0911	1966-up