





# Rear Fenders

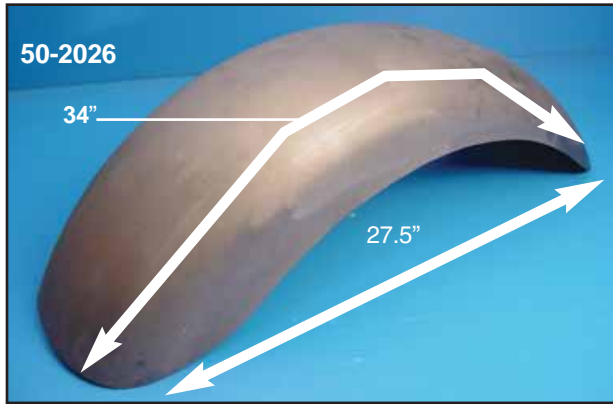

8.5" thru 12" fenders spacing may be required!

All Fenders are Steel!  
Ready for mock up...in raw finish

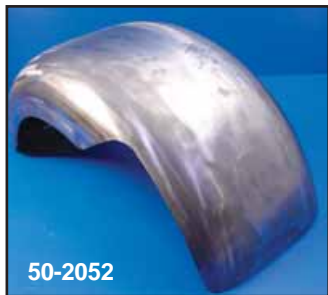

Rear Steel Fenders by Wyatt Gatling. Smooth formed and undrilled for builders application. Length is tip to tip.

| VT No.  | Width        | Length    | End to End | VT No.  | Width  | Length | End to End |
|---------|--------------|-----------|------------|---------|--------|--------|------------|
| 50-2026 | 9"           | 34"       | 27.5"      | 50-2054 | 12.75" | 38"    | 27.5" LC   |
| 50-2030 | 9.5" w/brace | 38" rigid | 29"        | 50-0244 | 13.5"  | 38"    | 27.5"      |
| 50-0213 | 10"          | 34"       | 27.5"      | 50-0891 | 9"     | 40"    | 29.5"      |
| 50-0214 | 11"          | 38"       | 29"        |         |        |        |            |
| 50-2033 | 12.75"       | 38"       | 29"        |         |        |        |            |
| 50-2052 | 12.75"       | 38"       | 27.5"      |         |        |        |            |

## Hardware



Rubber Washers are .200 thick for mounting accessories to fenders, sold packs of 20.

| VT No.  | Size  |
|---------|-------|
| 37-8869 | 1/4"  |
| 37-8870 | 5/16" |



**Weld On Mount Spool** with 5/16 x 24 thread.

VT No. 51-0588



**Custom Fender Mount Kit** includes rubber bushings.

VT No. 31-0718



**Flat Washers** used for mounting fenders and rails. Measures 1 1/4" diameter with a 5/16 bolt hole, sold in 10 packs. VT No. 40-0604

**Fender U Clamp** is used on 1936-57 Rigid models. Secures rear fender to frame cross tube. Replaces 59800-36.

| VT No.  | Finish     | Note                                   |
|---------|------------|--|
| 31-0190 | Chrome     | Order chrome carriage bolts separately |
| 31-0457 | Parkerized |  |
| 37-9204 |            | Bolt set, when using rear frame bar    |
| 37-1507 | Chrome     | Carriage bolts                         |