



Master Cylinder Rebuild



Handlebar Master Cylinder Rebuild Kits. Each kit contains parts necessary for complete rebuild.

VT No.	OEM	Years	Fits
23-3020	45006-87	1987-95	11/16" Bore
23-1716	45063-82	1982-85	3/4" Bore
23-3021	45072-87	1985-95	All 5/8" Bore
23-1714	45006-96	1996-2003	9/16" Bore
23-1715	45072-96	1996-2003	11/16" Bore
23-0857	42862-06A	2008-up	Touring
28-2002	45042-82	Fluid Level Window	1982-95

Rear Master Cylinder Rebuilds

VT No.	OEM	Fits
23-1718	41762-58A	1958-79 Big Twin
23-1717	42374-77B	1979-84 FL, 80-85 FLT
23-1720	42374-82A	1983-85 FX 4-speed 1984-86 FXST-FLST
23-2010	42374-86A	1986-91 FLT
23-2011	42382-82A	1982-E87 All FXR
23-9177	42382-87A	L1987-up FXR-FXST 1992-07 FLT
23-9201	42452-87	L1987-99 FXST, Body Rebuild
23-0863	42932-08	2008-up Touring



Late Plunger Springs act as brake pedal return springs on rear mounted master cylinders, zinc.


VT No.	OEM	Model
13-9165	40920-79	1979-up FLT
13-9166	40920-82	1982-86 FXWG-FXST
13-9170	40920-87	1987-up FXST-FLST-Sportster
37-9042	515	Cotter 1/16 x 3/4
37-9043	6220W	Washer 1/4 x 7/16 x 1/32

Top Gasket



Front Master Cylinder Top Gaskets

VT No.	OEM	Year
15-0188	45012-72	1972-81
15-0204	45012-82	1982-84
15-0242	45005-85	1985-95
15-0250	45005-96	1996-up

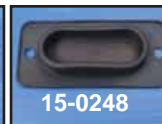

Rear Master Cylinder Cover Gaskets are sold each.

VT No.	OEM	Year	Type
15-0202	41766-58	1958-78	MC
15-0203	42455-80	1980-up	MC Reservoir
15-0248	42455-82	1982-E87	Reservoir
15-0242	45005-85	1985-95	MC
15-0540	42455-99	2000-up	Reservoir



Stainless Steel Master Cylinder Top Screws, 25 pack.

VT No.	OEM	Years	Type
37-8947	2628	1972-81	Front MC Top, Countersunk
37-8948	2579	1982-up	Front MC Top, Countersunk
37-8821	42534-82	1982-up	Reservoir Cover