



Seat Post

13-9253



Heavy Duty Seat Post Spring Set includes full set of springs and spacers.

VT No.	Item
13-9253	Kit
49-0263	Spacer Set



8859-1



10-1288




10-2497

Seat Post Bushings. Bronze.

VT No.	OEM	Years	Model
8859-1	47581-29	1929-73	45
7708-1	47583-36	1936-57	BT
10-1288	47583-36	1936-57	BT
10-2497	47094-58	1958-79	BT
2084-2	47054-58	1958-79	BT



2086-1



2085-2

Seat Post Bushing Installation Tools.

2086-1 1936-57 BT

2085-2 1958-79 BT

2087-1 1926-73 45



Seat Clevis Pin and Spring is a reproduction of seat pin and spring retainer used on all models with seat post 1929-up. **VT No. 8623-2**



Seat Post Rod Lock Nut and Lockwasher fits all models 1925-81 except FX, FL. Replaces 51674-25.

VT No.	Finish
8874-2	Cadmium
9691-2	Parkerized



54-0650



Mini-Shock will replace Big Twin seat post in 1936-80 frames includes adapter clevis to connect to "T".

VT No. 54-0650

42-0322



Replica Battery and Oil Tank Cover made of stainless to cover battery and oil tank. on 1936-57 Big Twin Rigid models. Can easily be removed for filling oil tank or battery. Replaces 66374-48.

VT No. 42-0322

Note: Seat "T" Components are compatible with the seat spring posts as fitted to 1930-80 models of Big Twins and 45 models. Big Twins 1930-80 are machined to fit a seat post bushing and seat post.



Seat Posts for 74, 80 & 45 models are assembled with springs and hardware. Top clevis pin and bottom nut are sold separately.

Note: 49-1933 post is dia.1.060", 49-0181 and 49-1929 posts are 1.180" dia.

VT No.	OEM	Fits	Finish
49-1933	51602-30	1930-73	45's Black
49-1929	51610-58	1936-80	BT Chrome
49-0181	51610-58	1936-80	BT Black
13-0214	Cpt. Set	1936-80 (6pc)	Spring Set
13-0202	5177-36	Recoil Spring Set Only	
49-0247	—	1936-64 BT	Cadmium
49-0248	—	1936-64 BT	Cadmium
		(Heavy Duty)	
13-0212	51770-29	BT+ 45 Spring	Lower Set, Stock
			Heavy
13-9244	51770-29	As above	
49-1934	51661-36	BT Seat Post	
		Inner Rod w/Spacer	
8623-2	51918-29	Top Clevis Pin, Parkerized	
	51920-29	& Spring Kit	
49-0242	As Above	Zinc	
8874-2	51674-25	Lower Nut Kit	Cadmium
9691-2	51674-25	As Above	Parkerized
49-0226	51791-31	Spring Spacer	


31-0507 Installed with 31-0461 on bike



Seat Rail Mount Kit allows attachment of our rail 31-0507 to seat T's, 31-0511 or replica type, 31-0415, when fitted with leather police style solo saddles with or without skirts.

VT No.	Item
31-0461	Black Mount Kit Only
31-0507	Seat Handrail, shown

42-0322

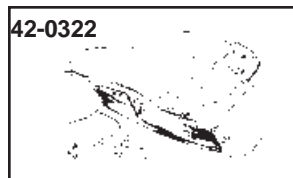

31-0461

