




# Forward Brake Kit

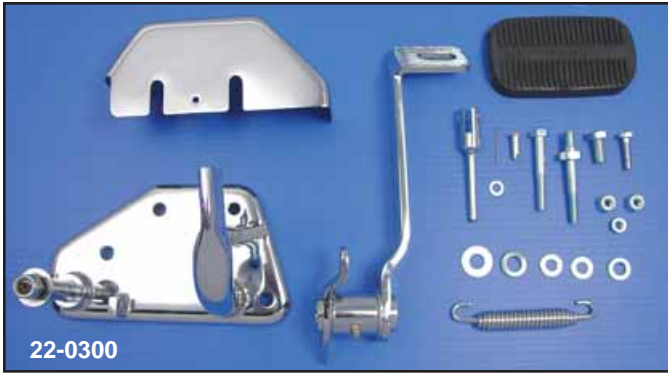


22-0300

**1979-84 FLH Brake Kit** includes chrome pedal, chrome plate with front footboard bracket, plunger, spring and stud. Order master cylinder separately.

| VT No.  | Item                     |
|---------|--------------------------|
| 22-0300 | Chrome Kit               |
| 23-1735 | Chrome Master Cylinder   |
| 23-1772 | Alloy Master Cylinder    |
| 27-0596 | Rear Floor Board Bracket |
| 37-6366 | Master Cylinder Stud     |



22-0506 Installed

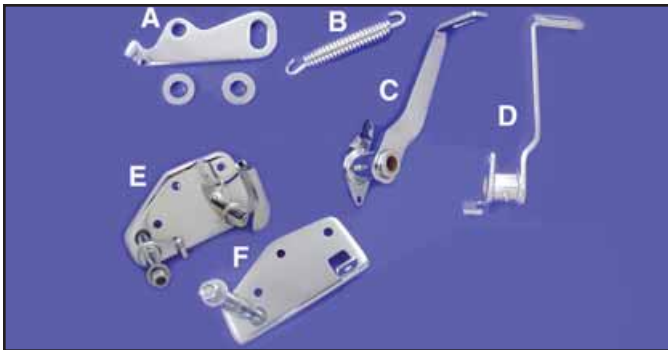

## Chrome Hydraulic Brake Pedals and Backing Plates.

| VT No.  | # | OEM       | Year              | Item    |
|---------|---|-----------|-------------------|---------|
| 23-0120 | A | 42411-70  | 1970-78 BT        | Stop    |
| 23-1742 |   | 50668-35  | Spacers for above | Spacers |
| 13-0147 | B | 42427-58  | Spring            | Spring  |
| 23-0103 | D | 42402-73A | 1970-E79 FLH      | Pedal   |
| 23-9192 | C | 42402-79  | L1979-84 FLH      | Pedal   |
| 23-0451 | E | 42480-79  | 1979-84 FLH       | Plate   |
| 23-0102 | F | 42401-73A | 1970-E79 FLH      | Plate   |



VT No.  
22-1017  
Shown

**Original Forward Brake Controls** assemblies will equip all Big Twins with hydraulic brakes and powered by either Evolution or 1970-99 Shovel engines. Available in either Wagner or Kelsey Hayes styles, with or without master cylinders. Footboards can be fitted to our Wagner style kits VT No. 22-0500, 22-0505 or 22-0506. Wagner styles use 41761-73 master cylinder, or Kelsey Hayes type 41576-79A, for those wishing to utilize their existing master cylinder. Complete assemblies include detailed instructions and diagram for installation. Display packaged.

| VT No.  | Type         | Note                        |
|---------|--------------|-----------------------------|
| 22-0500 | Wagner       | Without Master Cylinder     |
| 22-0505 | Wagner       | With Plain Master Cylinder  |
| 22-0506 | Wagner       | With Chrome Master Cylinder |
| 22-0501 | Kelsey Hayes | Without Master Cylinder     |
| 22-1017 | Kelsey Hayes | With Chrome Master Cylinder |

\*Note: For kits 22-0500, 22-0505, 22-0506, 22-0501, and 22-1017, use Russell front line 23-8809 and rear line 23-8915 f or disc brake models and tee 23-0707.



23-0351



28-0313

**Chrome Forward Brake Pedal** allows driver better access to pedal from footboard. Fits 1979-84 FLH.

| VT No.  | Item  |
|---------|-------|
| 23-0351 | Pedal |
| 28-0313 | Pad   |



**Footpeg Mounting Studs** fit through Wagner or Kelsey Hayes master cylinders to mount foot pegs to these forward assemblies. Stud side shown accepts that size footpeg yoke.

| VT No.  | Type                       |
|---------|----------------------------|
| 37-8986 | Kelsey Hayes Type 3/8 x 24 |
| 37-8987 | Wagner Type 1/2 x 20       |