



Grip Sets



1909-34 Vintage Style Grip Set replaces the 1909 version 3310-09 for restoration on 1909-34, I.D. 1¹/₈" on both sides.


VT No.	Color
28-0104	Black
28-0105	White
28-0106	Red



Replica Short Stock Grips replace 3310-35B. Fits 1935-48 with stock controls.

VT No.	Color
28-0101	Black
28-0102	White

Spring Fork Brake

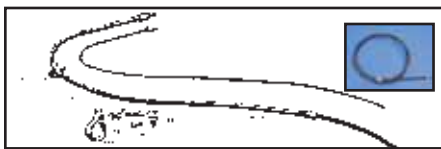

Replica Brake Cable Assembly for 1930-57 Spring Fork, Big Twin and 45". Includes hous-

ing with end ferrules, oil cup kit and inner cable. Replaces 45085-30.

Order clamps separately.

VT No.	OEM	Item/Fits	Year
49-0431	45085-30	Cable Assembly, BT	1930-40
49-0432	45085-30	Cable Assembly 45	1930-40
49-0422	45085-30A	Cable Assembly, BT and Servi	1941-57
49-0426	45085-30A	Cable Assembly, 45	1941-52
36-2567	—	Inner Cable, All	
49-0256	45103-39	Oiler Cup	
37-9027	9968	Clamp to attach to fork, All	
37-8776	9980	Clamp to attach to bars, All	



1941-48 Big Twin Spring Fork Cable and Handle Kit includes replica style cable with oiler fitting and end ferrules, polished or chrome handle and clamps to attach cable to bars and fork leg.

VT No.	Type
36-0414	Polished
36-0418	Chrome



Replica Brake Lever is an authentic reproduction in chrome, complete as pictured for 1928-40 Springer models.

VT No.	OEM	Item
26-2134	45002-28	Complete Assembly
37-8775	4154-28	Screw Set
26-2150	4150-28	Handle only
26-2151	4153-28	Lower Clamp
36-2580	45085-30	Cable Housing, Black Cotton
36-2578	—	Cable Housing, Nickel Only
36-2567	—	Inner



Brake Cable Coupling & Oiler, Cad plated solid brass coupling includes the dust cover 4142-30. 1930-38.

VT No. 9004-2



1941-64 Replica Brake Clutch Handle features accurately formed clamp and cadmium plated hardware. Replaces 45002-41.

VT No. 26-0541



Replica Lever Assemblies include slotted lever bushing as original with small hole for brake or clutch.

VT No.	#	OEM	Finish
26-2127	A	45002-41	Chrome Complete
26-2126	A	45002-41	Polish Complete
26-2144	B	Ball End	Polish Complete
26-0522	B	Ball End	Chrome Complete
26-0510		Ball End	Polish, Lever Only
26-0515		Ball End	Chrome, Lever Only
26-2174		45017-41	Stock Lever Only
26-2192	—		Chrome Stock Lever Only
26-0542	—		Lever Clamp Strap
8819-4		45031-41	1941-64 Pin and Nut, Cadmium
26-0506		45033-49	1949-64 Lever Bushing w/cotter



Front Brake Cable Adjuster duplicate of original part. One or two locknuts included depending on application.

VT No.	Year	Model	Finish
9740-2	1928-40	All	Chrome
8938-2	1928-40	All	Cadmium
9683-2	1928-40	All	Parkerized
9739-2	1941-48 BT, 1941-57	Servi-car	Chrome
8624-2	1941-48 BT, 1941-57	Servi-car	Cadmium
9630-2	1941-48 BT, 1941-57	Servi-car	Parkerized



Complete Axle Kits fit 1936-48 BT with offset stock rockers.

VT No.	Finish
44-0581	Chrome
44-1983	Parkerized