


10-0294

1. Create Oil Passage


2. Relief of Material

Create an Oil Passage.

Use gasket as a guide to mark where to drill a .125" hole.

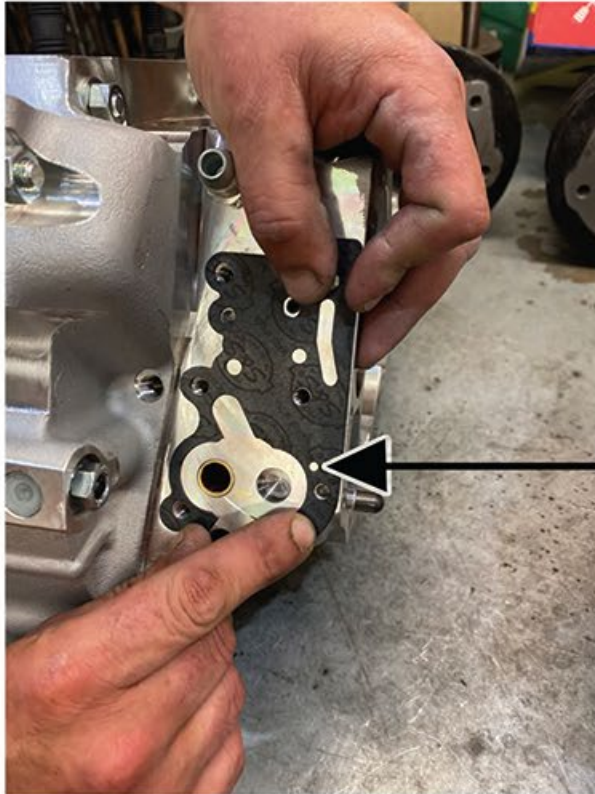

Mark and drill here.

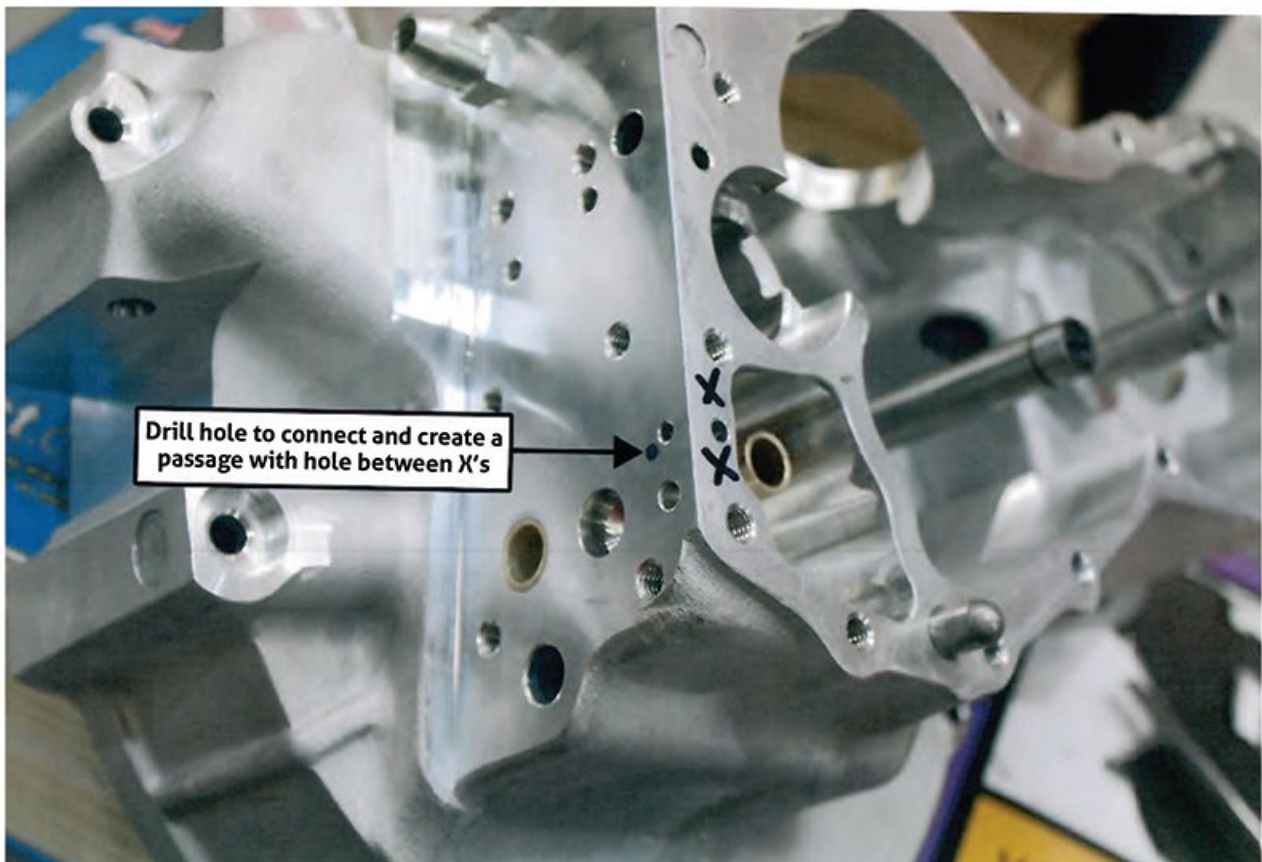

Relief of material may be necessary on high performance enforced crank cases for gear and seperator clearance at points A, B & C..

