

CENTER STAND
VT 16-1600
Installation instructions

- 1) Insert the clamping bracket (Figure 1) between the transmission and the frame bow tie (Figure 2).
- 2) Align the screw holes in the stand (Figure 3) with the holes in the bow tie and the holes in the clamping bracket.
- 3) Install the two ½ inch screws with lock washers through the stand and into the clamping bracket. Tighten the screws.

How To Use

Once the stand is installed, use your right foot to push the stand lever back towards the tire and downward until the both feet of the stand contact the ground. Apply pressure with your foot until the bike settles completely on the stand. It is suggested you have someone on the other side of the bike until you become accustomed to this procedure. Only use this stand on level ground with the bike in first gear.

Parts list	Quantity
Stand Assembly	1
Stand Clamp	1
1/2 -13NC x 1-1/4 Hex Head Cap Screw	2
1/2 Split Lock Washer	2

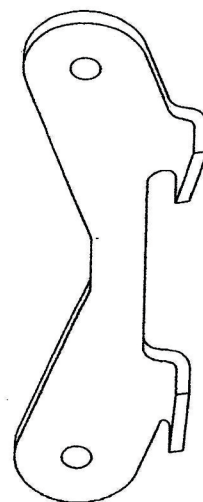


Figure 1

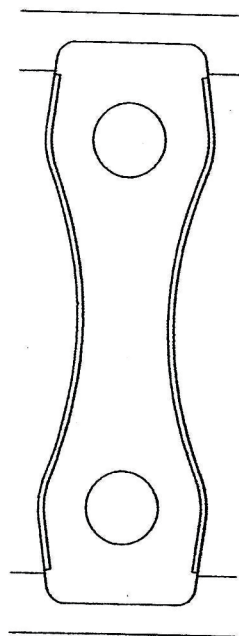


Figure 2

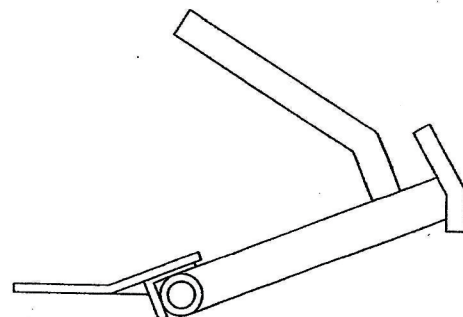


Figure 3