




17-0413

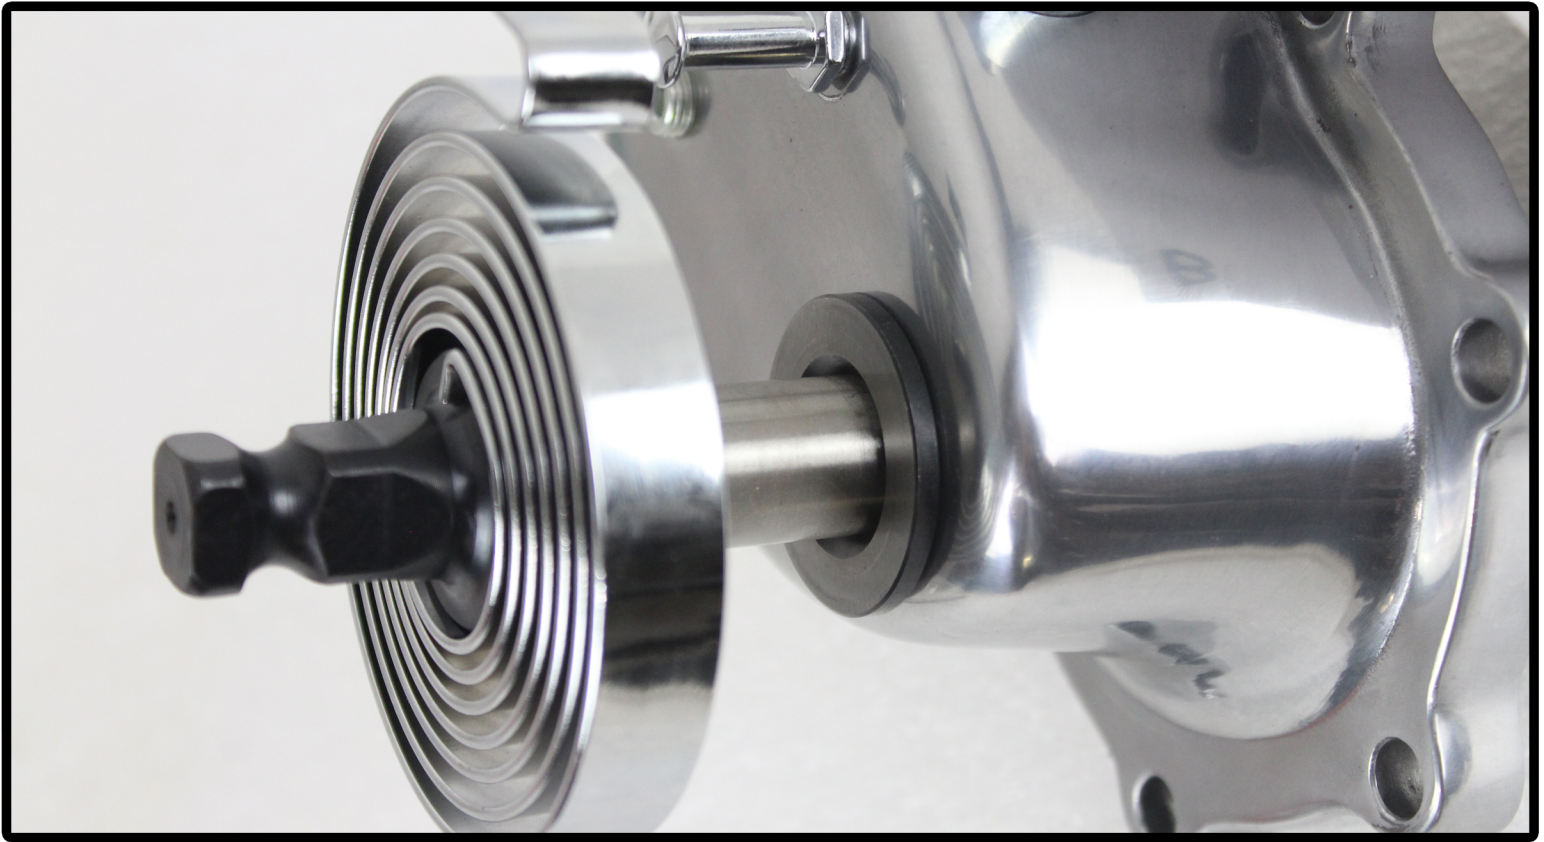

**FOR PROPER INSTALLATION THE CHAMFER ON THE THRUST WASHER VT #17-0413
NEEDS TO BE FACING THE KICK STARTER SPRING VT #13-0123
AND AWAY FROM THE KICK STARTER COVER VT #43-0100**