

**V-Twin Mfg.
Chrome Belt Guard Cover
For Use on 1997- 2008 FLT
VT No. 27-0945**

This is a custom application and rider safety depends on proper installation. This product should only be installed by a knowledgeable and trained motorcycle technician. V-Twin Mfg. accepts no responsibility for improper installation.

This Chrome Belt guard is designed to fit over your OEM Belt cover.

Installation Instructions:

1. Remove only the rear bolt(s) on the OEM Belt Guard (See figure 1)
2. Install the new Belt Cover over the existing OEM Belt Guard using the bolts removed in step 1 Make certain the lower edge is hooked into the bottom of the OEM Cover. (See figure 2)
3. Check to insure the cover will not contact the Belt, Tire or Wheel.

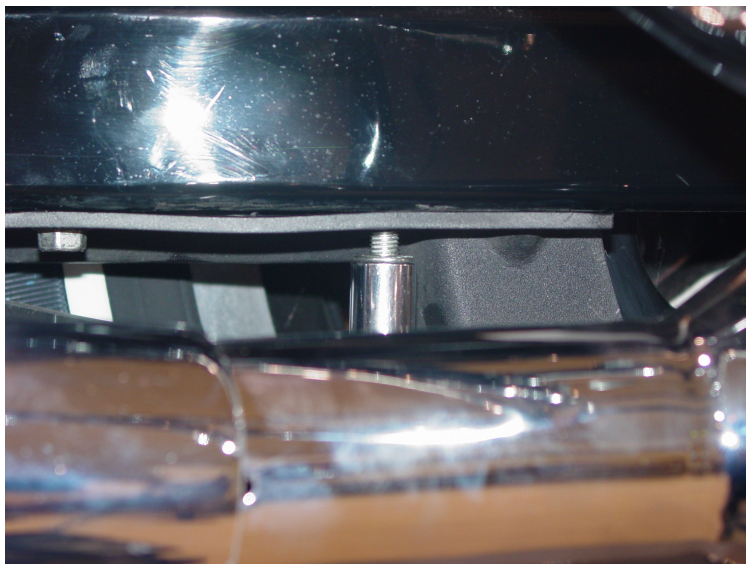


Figure 1



Figure 2