

V-Twin Mfg.
FOOTBOARD EXTENSION KIT
For use on 2009 FLT Models
VT No. 27-1526

This is a custom application and rider safety depends on proper installation. This product should only be installed by a knowledgeable and trained motorcycle technician. V-Twin Mfg. accepts no responsibility for improper installation.

FOOTBOARD EXTENSION KIT - The Footboard Extension Kit is designed to relocate the Footboards outboard to improve rider comfort on all 2009 Touring models.

NOTE: The rider need to be aware that the Footboards may scrape the road surface at less aggressive lean angles with the installation of this kit.

Installation Instruction:

1. Remove the OEM Footboards and brackets as per the service manual.
2. Install the Footboards using the spacers and hardware provided in the kit as shown in figure 1.
3. Spacers "A" are used on the front Footboard supports with the 3-3/4 inch bolts "D" and lockwasher.
4. Spacer "B" is the large spacer used on the left rear support with a 2-1/2 inch bolt "E" and lockwasher.
5. Spacer "C" is the smaller spacer used on the right rear support with a 2-1/2 inch bolt "E" and lockwasher.
6. Torque the Footboard bolts to 30-35 ft-lbs.

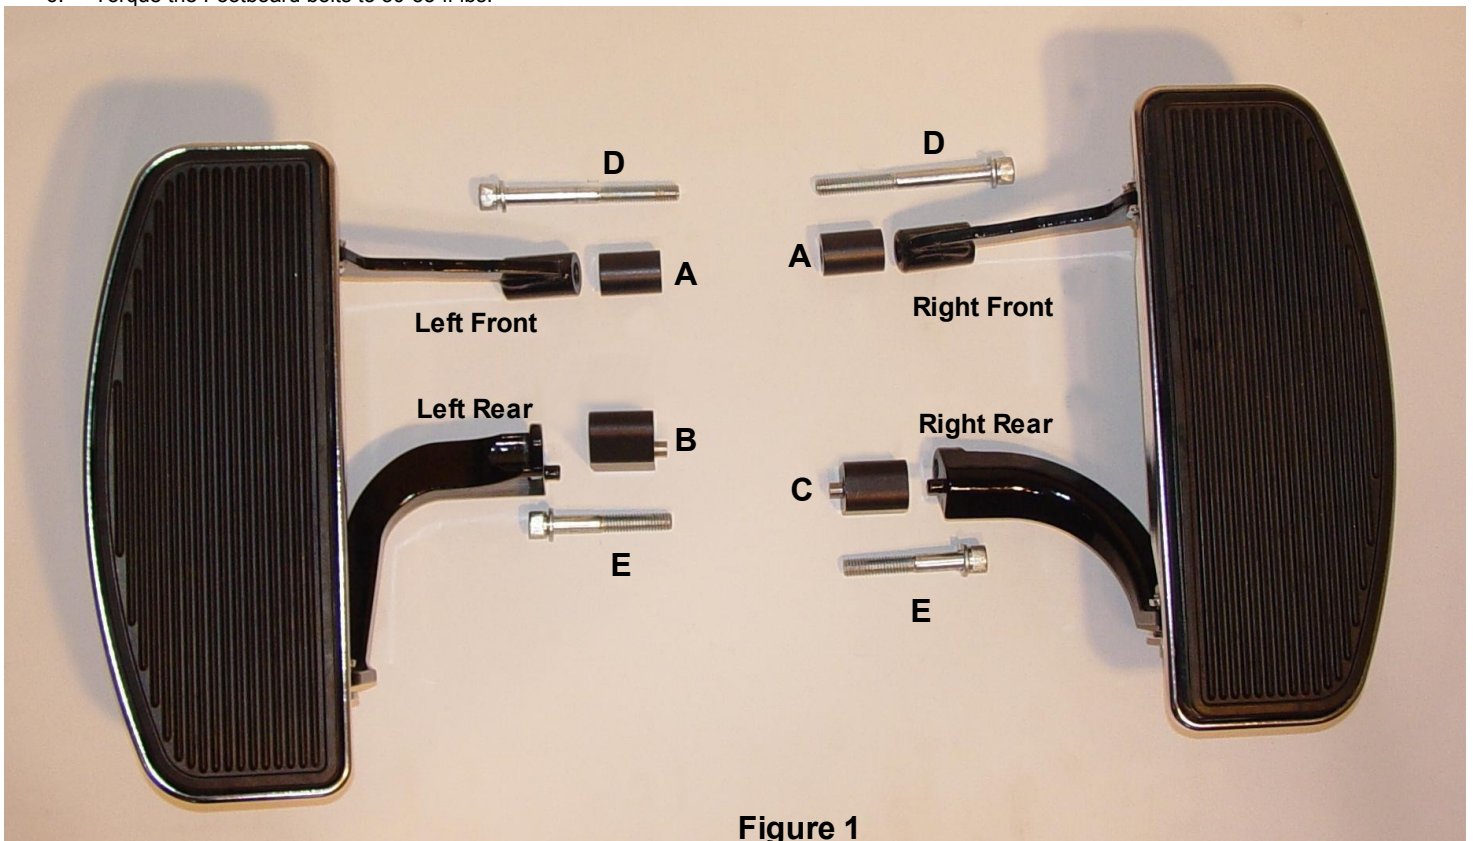


Figure 1

Parts list:

Quantity	Item	Description
2	A	Front spacers
1	B	Left rear spacer
1	C	Right rear spacer
2	D	Socket screw w/lock washer 3/8-18X3-3/4
2	E	Socket screw w/lock washer 3/8-18X2-1/2