


VT No. 32-8072
V-Twin Mfg.
Auto Advance Distributor with Clamp Fits 1966-1969 FL

To Install:

1. Make sure front cylinder is at top dead center on compression/ignition stroke.
2. Timing mark should be just coming into timing hole plug window.
3. Turn distributor so that the points are just about to open on the narrow lobe of the cam.

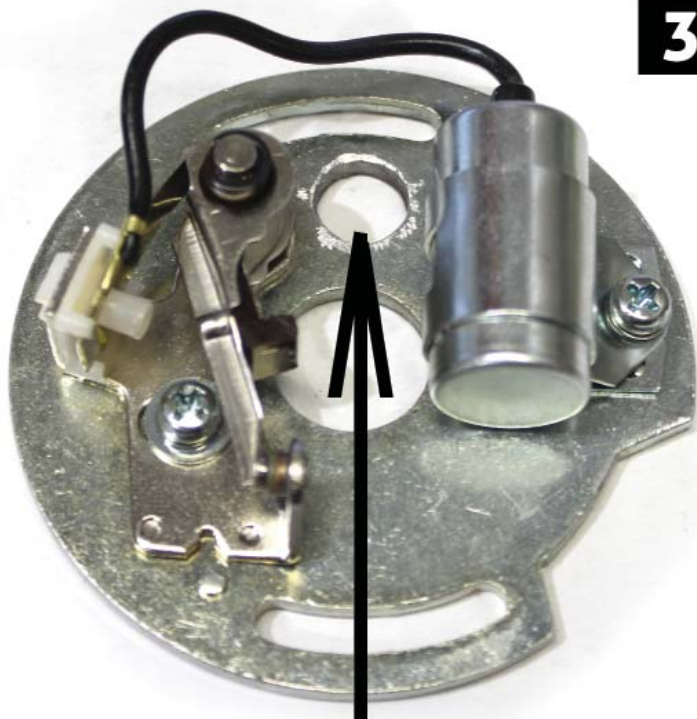

32-8072 / 32-8213

Drilling hole in plate helps to
set advance when timing.

**V to the Front
When Installed**

