


**V-Twin MFG.
Cycvator Air Filter
Fits 2008 and up FLT
VT No. 34-1289**

This is a custom application and rider safety depends on proper installation. This product should only be installed by a knowledgeable and trained motorcycle technician. V-Twin Mfg. accepts no responsibility for improper installation.



1. Refer to the service manual and remove the OEM air filter cover and filter element. The hoses will be re used.

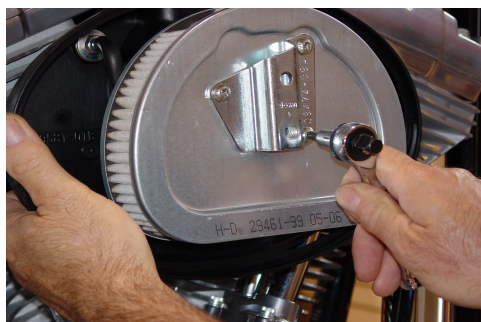

2. Remove the breather backing plate. The 2 breather bolts will be re used.




3. Re-install the breather bolts placing the the spacers over the induction supported bracket and the cylinder head.




4. Trim 5/16 off of each hose.

5. Install the uncut (long) hoses end, into the supplied air filter element

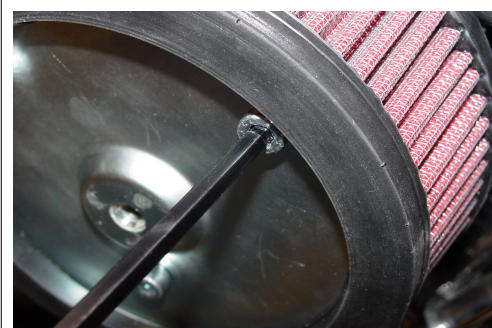


6. Install and tighten the filter element with the hoses onto the throttle body using the provided 1/4-20 X 2-1/2 inch bolts and new gasket.

7. Torque the breather bolts and the 1/4 inch bolts to 40-60 in-lbs.

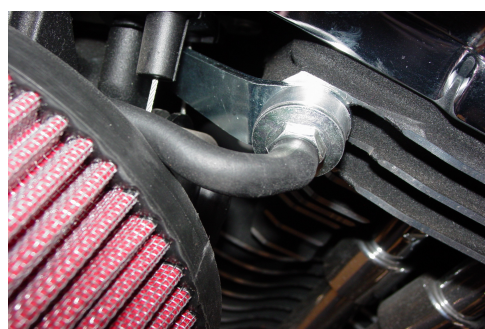

8. Attach the hoses to the breather bolts.

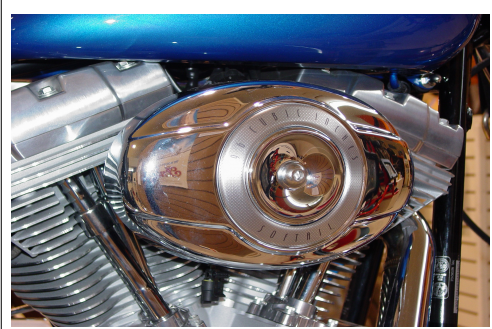

9. Remove the outer gasket from the OEM filter cover and install the cover with the OEM bolt.

Parts list:

Air filter element	1
Spacers	2
Bolt-1/4-20 X 2-1/2	3
Gasket	1