


V-Twin Mfg.
Measurement Guide for
Brown Leather Early Style Solo Seat
VT No. 47-0535

This is a custom application and rider safety depends on proper installation. This product should only be installed by a knowledgeable and trained motorcycle technician. V-Twin Mfg. accepts no responsibility for improper installation.

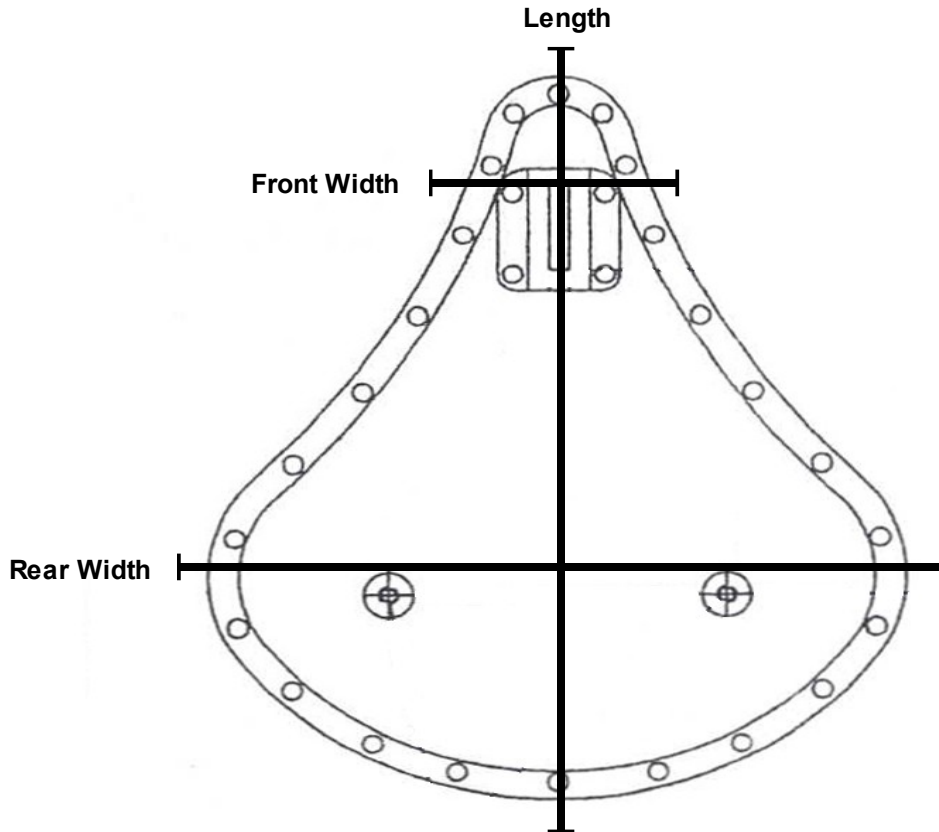

Police Model Solo Seat Dimensions