


**V-Twin Mfg.
Measurement Guide for
Gunfighter Aqua Flame Style Seat
VT No. 47-0580**

This is a custom application and rider safety depends on proper installation. This product should only be installed by a knowledgeable and trained motorcycle technician. V-Twin Mfg. accepts no responsibility for improper installation.

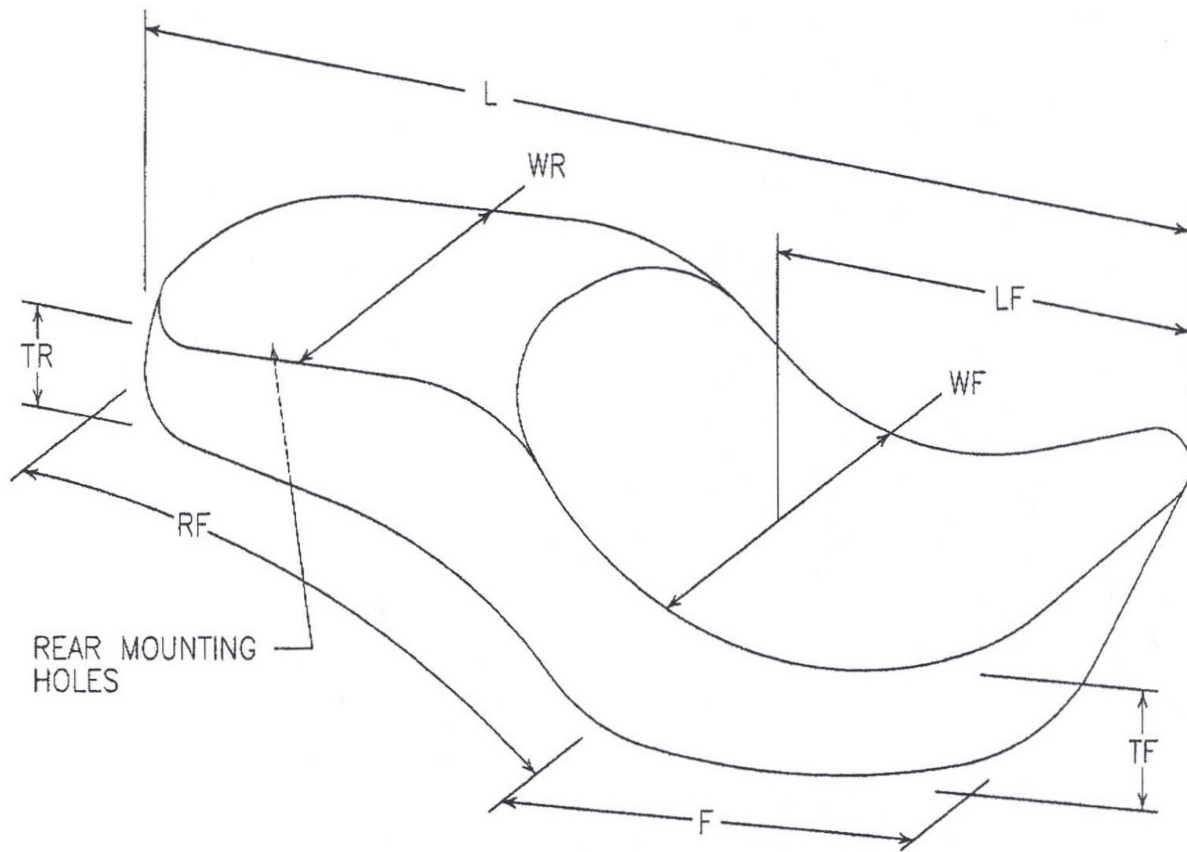

Seat Dimensions	
Length	L
Width Front	WF
Width Rear	WR
Length Front	LF
Base Length Front	F
Base Length Rear	RF
Thickness Front	TF
Thickness Rear	TR