


**V-Twin Mfg.  
Measurement Guide for  
Replica Bomber Brown Solo Seat  
VT No. 47-0607**

This is a custom application and rider safety depends on proper installation. This product should only be installed by a knowledgeable and trained motorcycle technician. V-Twin Mfg. accepts no responsibility for improper installation.

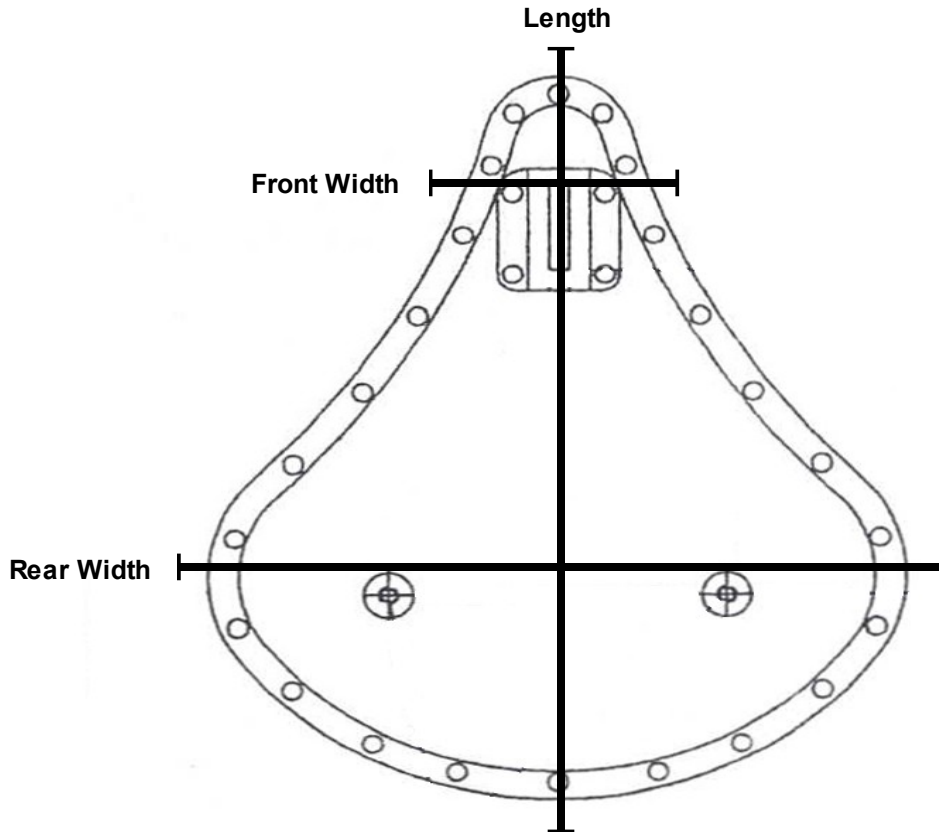

**Police Model Solo Seat Dimensions**