
V-Twin Mfg. Measurement Guide for Velocipede Brown Leather Solo Seat VT No. 47-0626

This is a custom application and rider safety depends on proper installation. This product should only be installed by a knowledgeable and trained motorcycle technician. V-Twin Mfg. accepts no responsibility for improper installation.

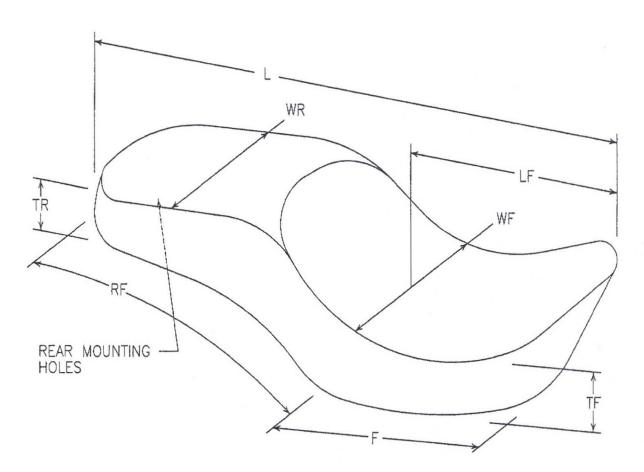

| Seat Dimensions | |
|-------------------|----|
| Length | L |
| Width Front | WF |
| Width Rear | WR |
| Length Front | LF |
| Base Length Front | F |
| Base Length Rear | RF |
| Thickness Front | TF |
| Thickness Rear | TR |